



MARS I

An instruction manual

Version Number 20210122

Important Notice

- * Please read the manual firstly before the machine is used.
- * Please keep this manual well so that the user could read it at any time.
- * Product will be improved constantly, and we reserve the right to update the manual without prior notice.

Matters to Attention

Notice

- ◆ DO NOT place the machine in a place that is uneven, tilted or easy to be shaken.
- ◆ Check the wires condition regularly once a week and check the machine comprehensively every month.
- ◆ Please prepare the small fire extinguisher to ensure the workplace safety and turn off the power when the staff is off work.
- ◆ Take care of wires and prevent pest from damaging wires.
- ◆ DO NOT place the machine where the sunlight shines directly to avoid to damage the internal parts of the machine.

Warning

- ◆ Machine should be connected to ground wire and its three-hole plug should be inserted into the power socket with the ground wire.
- ◆ There are precision parts in the machine, please do not drop it or make it to physical impact.
- ◆ DO NOT place the machine close to objects with high magnetic fields or strong radio waves.
- ◆ Machine is not waterproof, to avoid fire or electric shock, please don't make any liquid in the machine or expose it to the environment of dripping water or moisture.
- ◆ Machine is not fireproof, please do not place it close to any fire source.

Danger

- ◆ DO NOT touch the power plug with wet hands.
- ◆ DO NOT scratch, cut off or over-bend the power cord.
- ◆ DO NOT place heavy objects on the power cord.
- ◆ DO NOT use power cords with damaged insulation.
- ◆ DO NOT allow non-professionals to inspect or repair the machine at will, turn off the power when the machine is inspected or repaired.

Table of Contents

| | |
|-------------------------------------|----|
| I . How To Install..... | 1 |
| II . Specification And Parts | 22 |
| 1. Technical Parameters..... | 22 |
| 2. Parts | 22 |
| III. How To Play | 23 |
| IV. Product Appearance | 23 |
| V . How To Refill Prizes | 24 |
| VI. Structure Diagram..... | 25 |
| VII. Setting | 27 |
| 1. Setting Button | 27 |
| 2. Setting Button Introduction..... | 27 |
| 3. How To Set..... | 29 |
| VIII. Error Code..... | 30 |
| IX. Circuit Diagram..... | 31 |
| X . Main Board Diagram..... | 33 |
| XI. Maintenance | 34 |
| XII. Warranty Terms | 34 |


I . How To Install

Triangle Shape


| Parts list | | | |
|------------|------------------------------------|----------|---|
| No. | Name | Quantity | Picture |
| 1 | light cabinet base connect bracket | 1 |  |
| 2 | UFO Decorative light | 1 |  |
| 3 | Cabinet | 3 |  |
| 4 | Connect power cable | 3 |  |
| 5 | UFO light Connected Signal Wire | 3 |  |
| 6 | Main power cable | 1 |  |

Install Step


1. UFO light connect wire

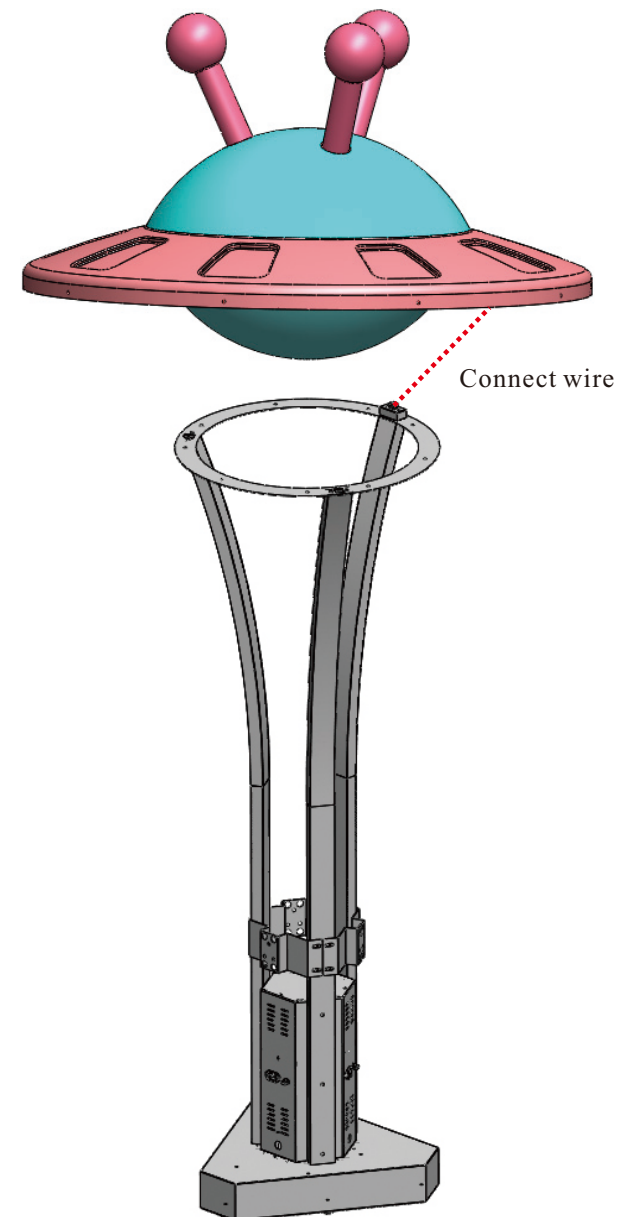


2. Fixed screw (9x M6*16 screws)

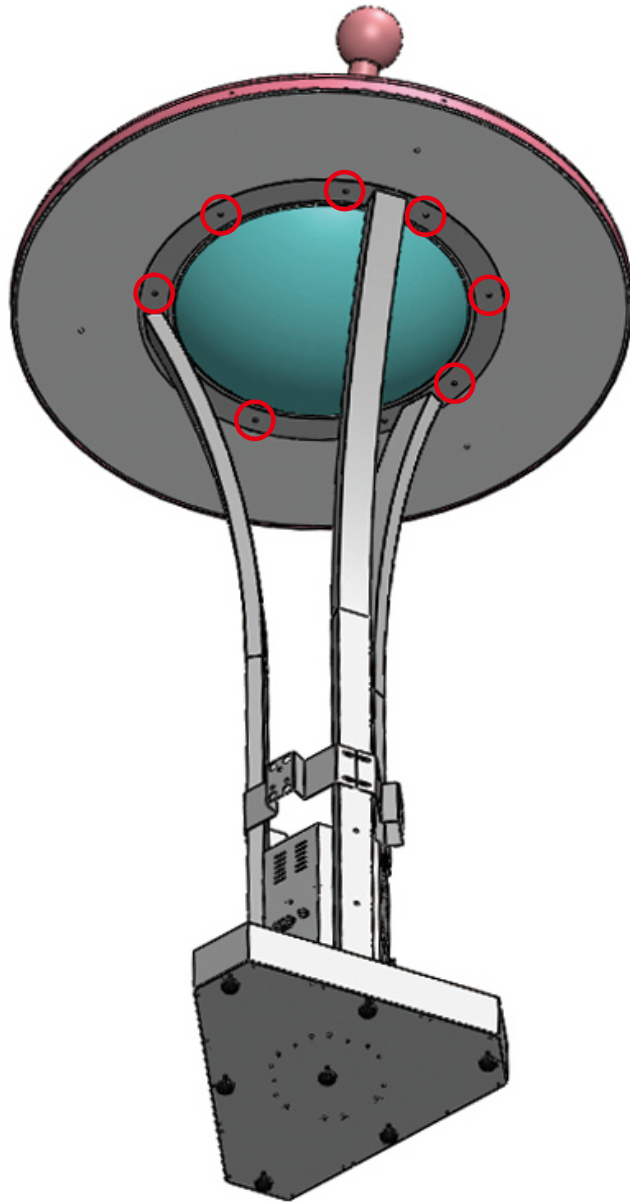




3. Take apart hardware bracket, total of 3
(12x M6*16 screws)

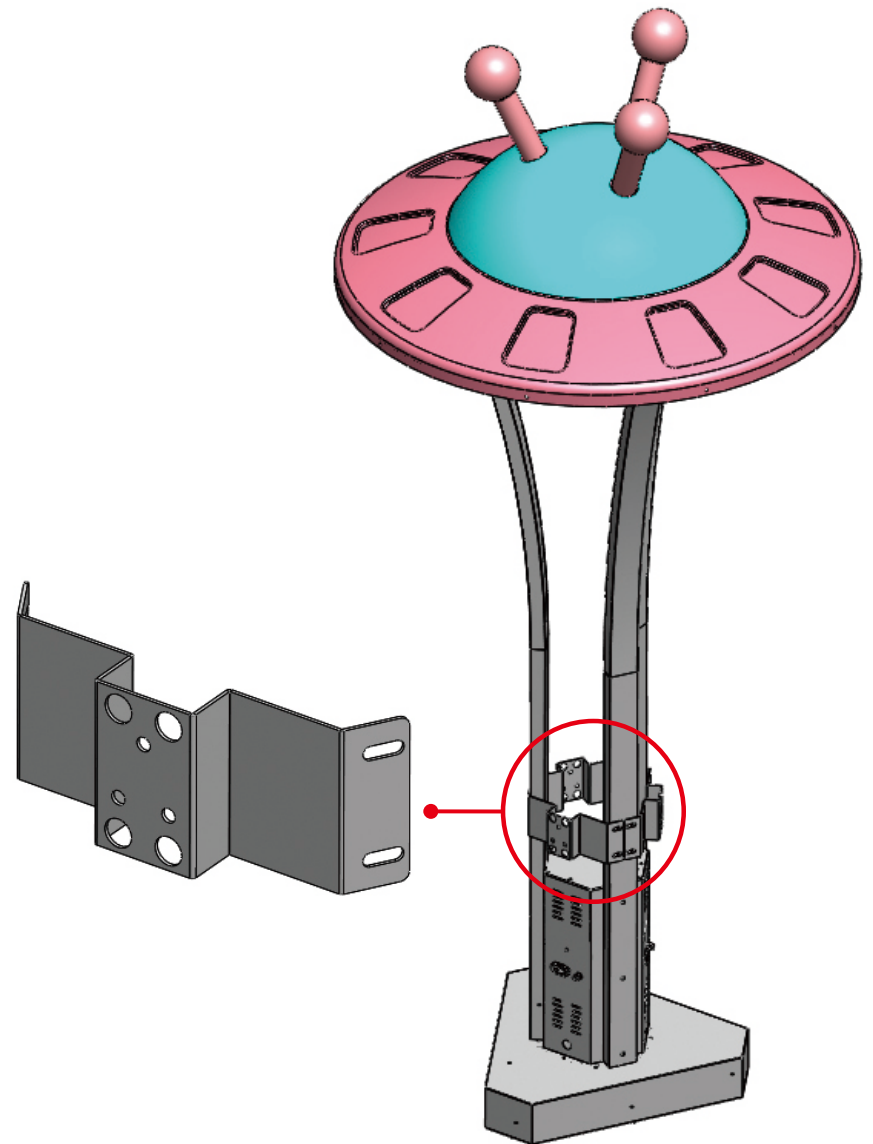


4. Connect bracket screws (3x M6*16 screws)

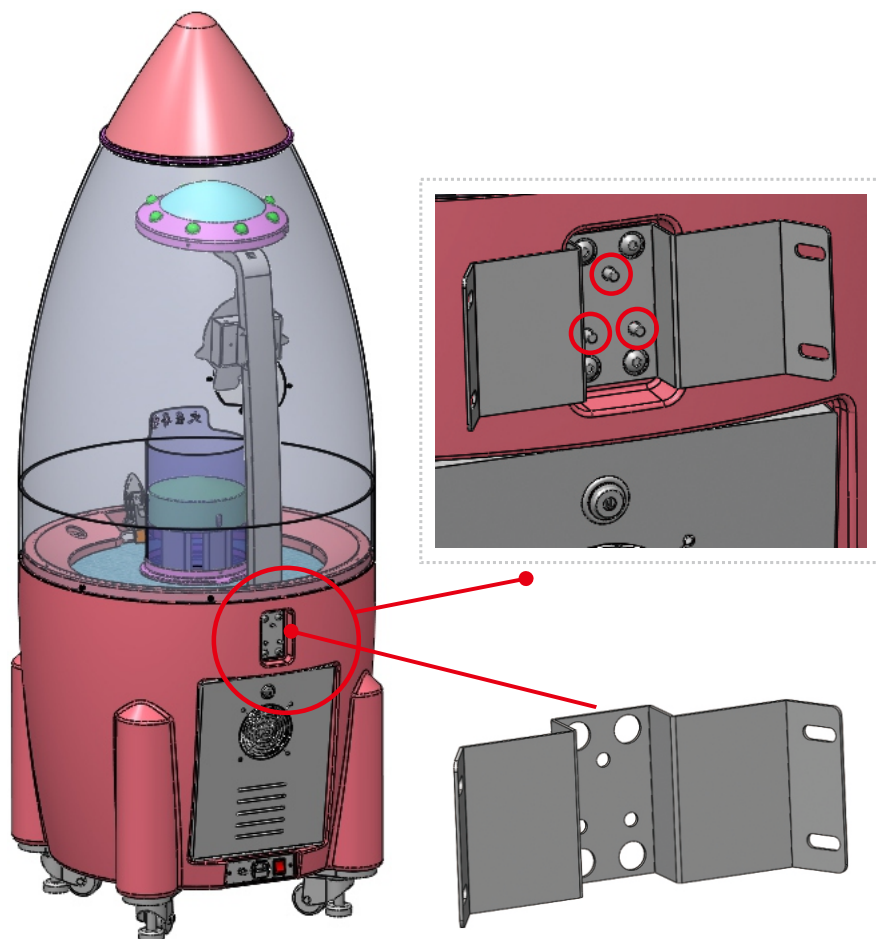


5. Connect the power of the machine and UFO light signal wire

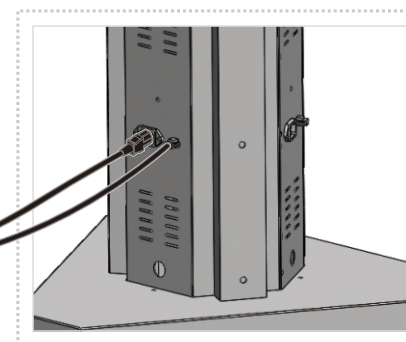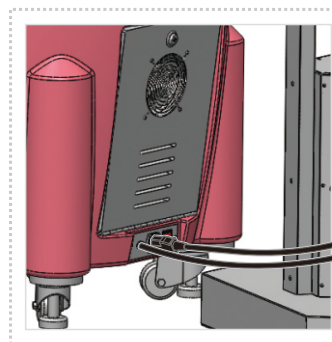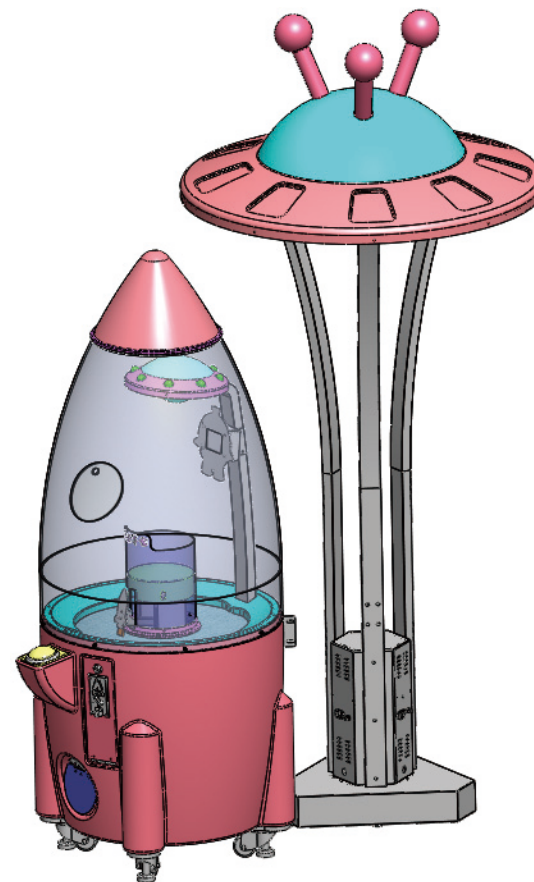



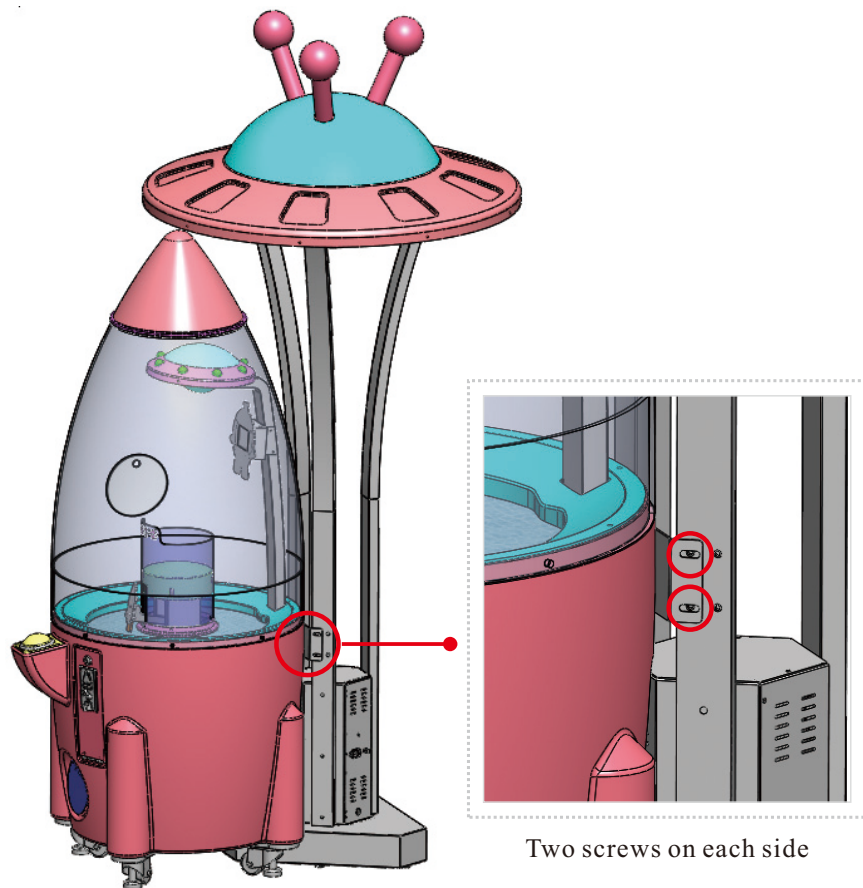


6. Fixed screws (4x M6*16 screws)

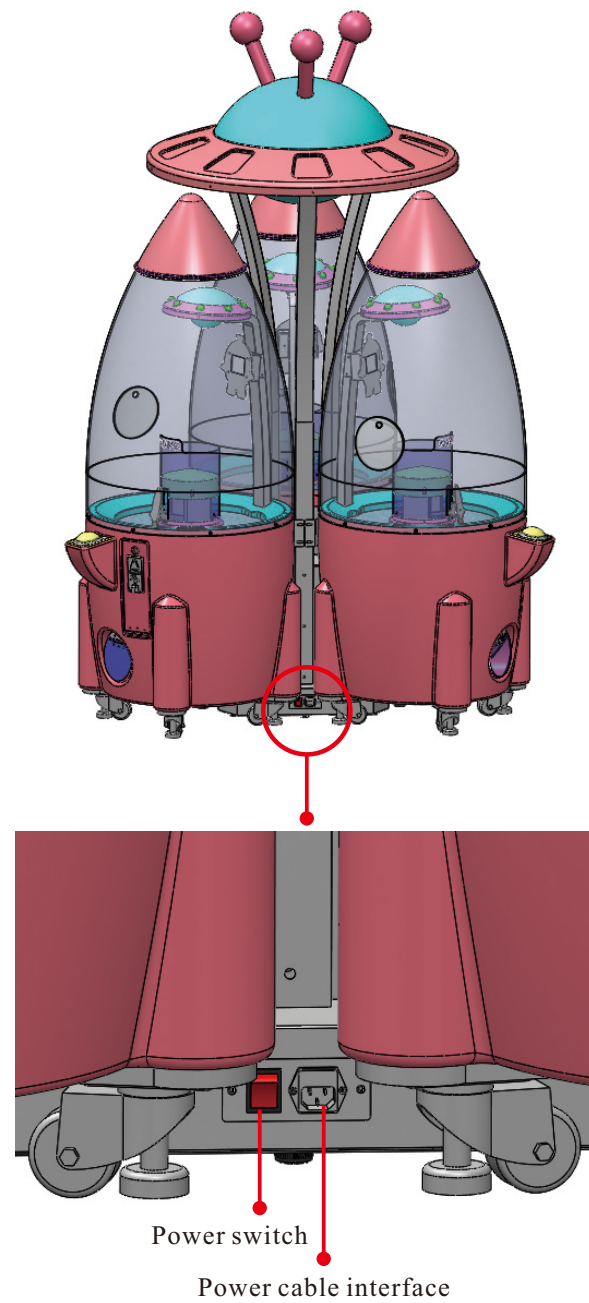

7. Repeat step 6

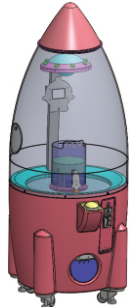


One Line Shape


| Parts list | | | |
|------------|------------------------------------|----------|---|
| No. | Name | Quantity | Picture |
| 1 | light cabinet base connect bracket | 1 |  |
| 2 | UFO Decorative light | 1 |  |
| 3 | Cabinet | 3 |  |
| 4 | UFO light Connected Signal Wire | 3 |  |
| 5 | Main power cable | 4 |  |

Install Step


1. Connect the base and the left metal bracket (4x M6*40 hexagon inner screws)

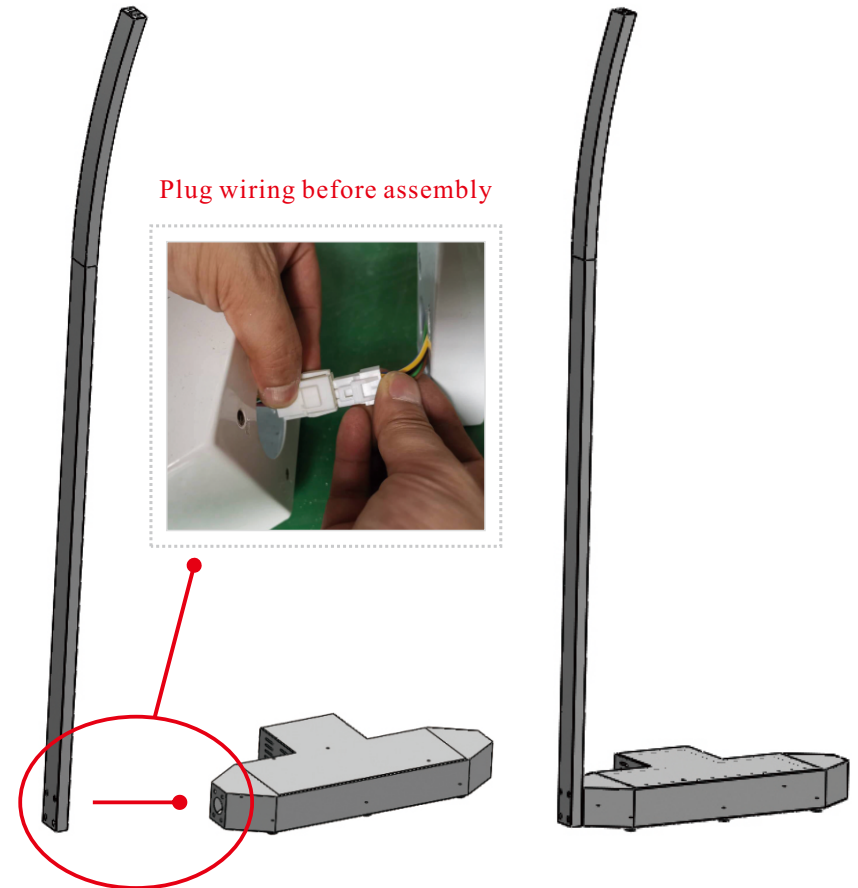


2. Connect the base and the right metal bracket
(4 x M6*40 hexagon inner screws)

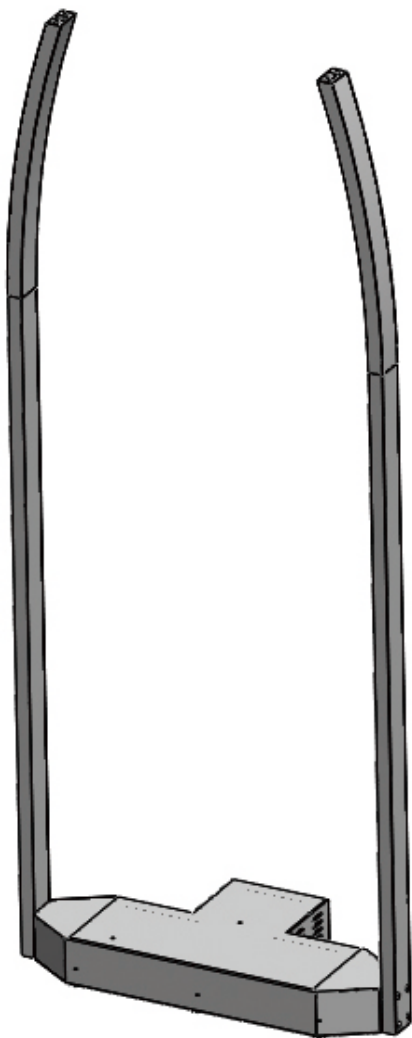


3. Connect the left and right support bars
(4 x M6*16 hexagon inner screws, 8 in total)

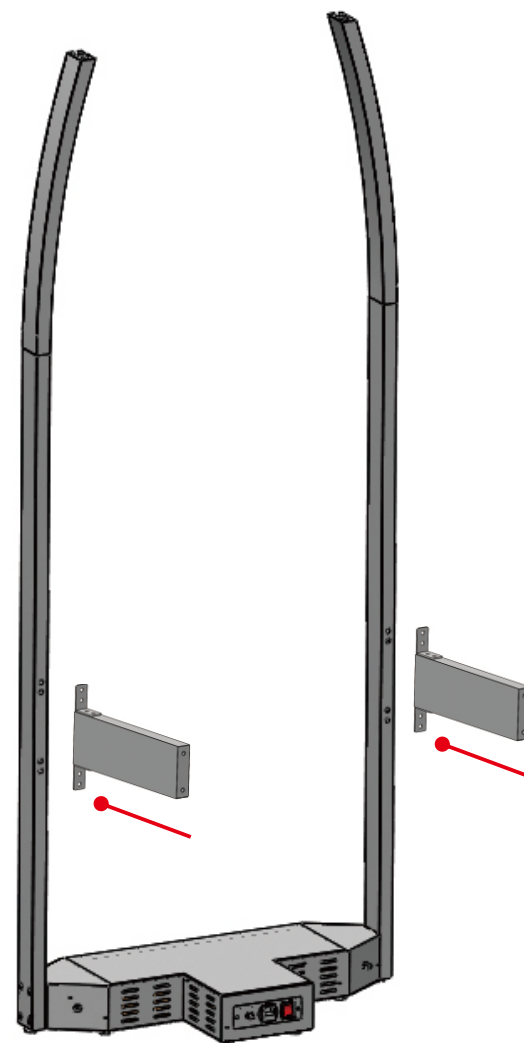


4. Connect the back fixed bracket
(4 x M6*16 hexagon inner screws)

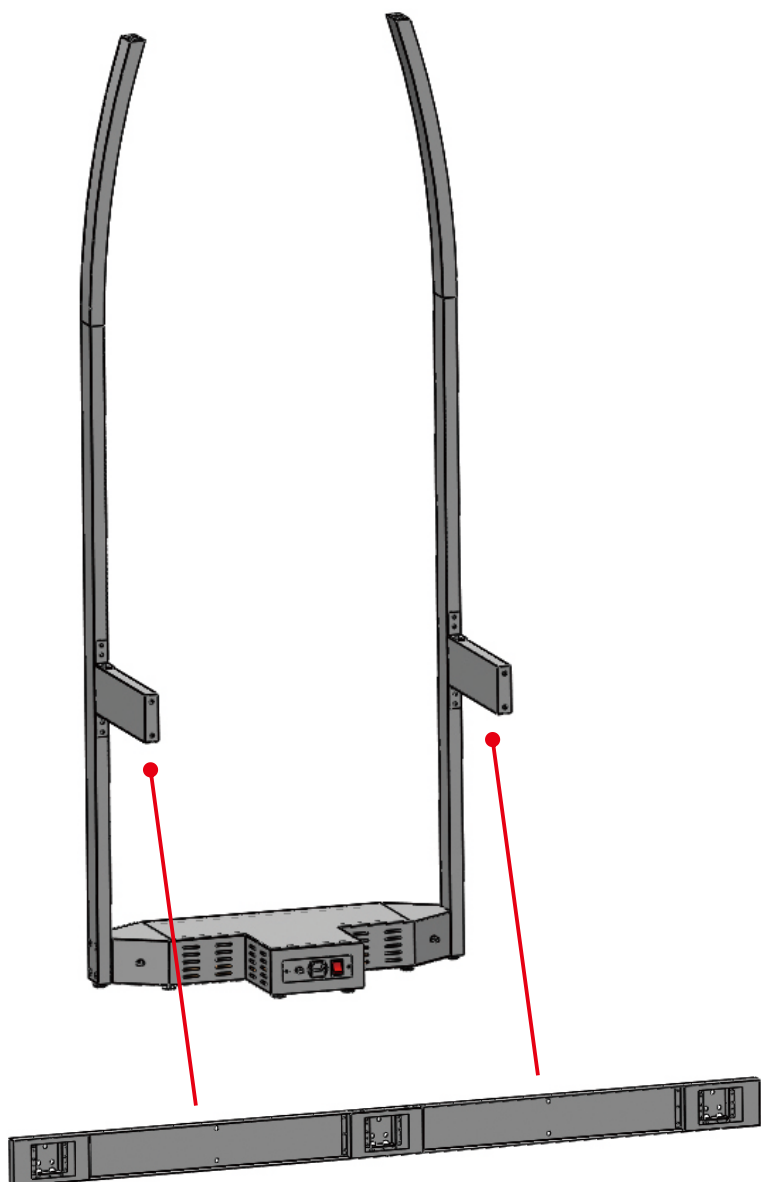

5. Connect the top light fixed bracket
(4 x M6*16 hexagon inner screws)

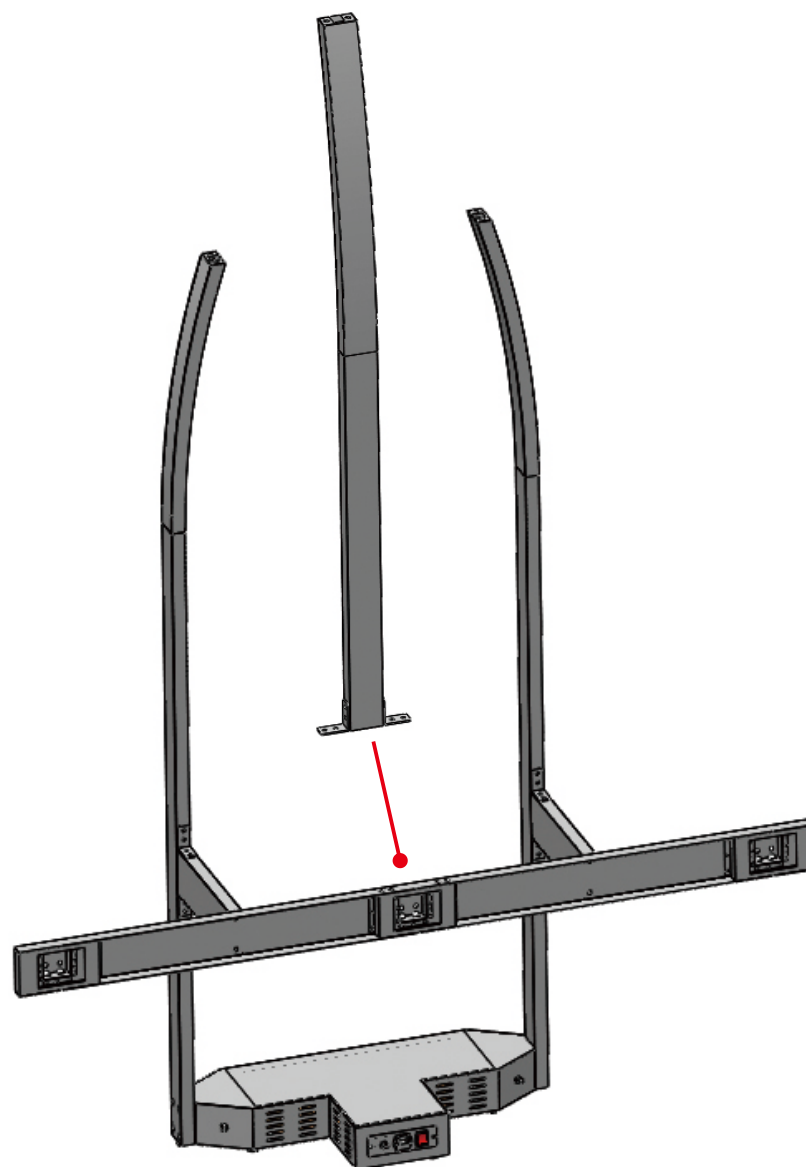



6. Connect the top circle bracket
(4 x M6*16 hexagon inner screws)

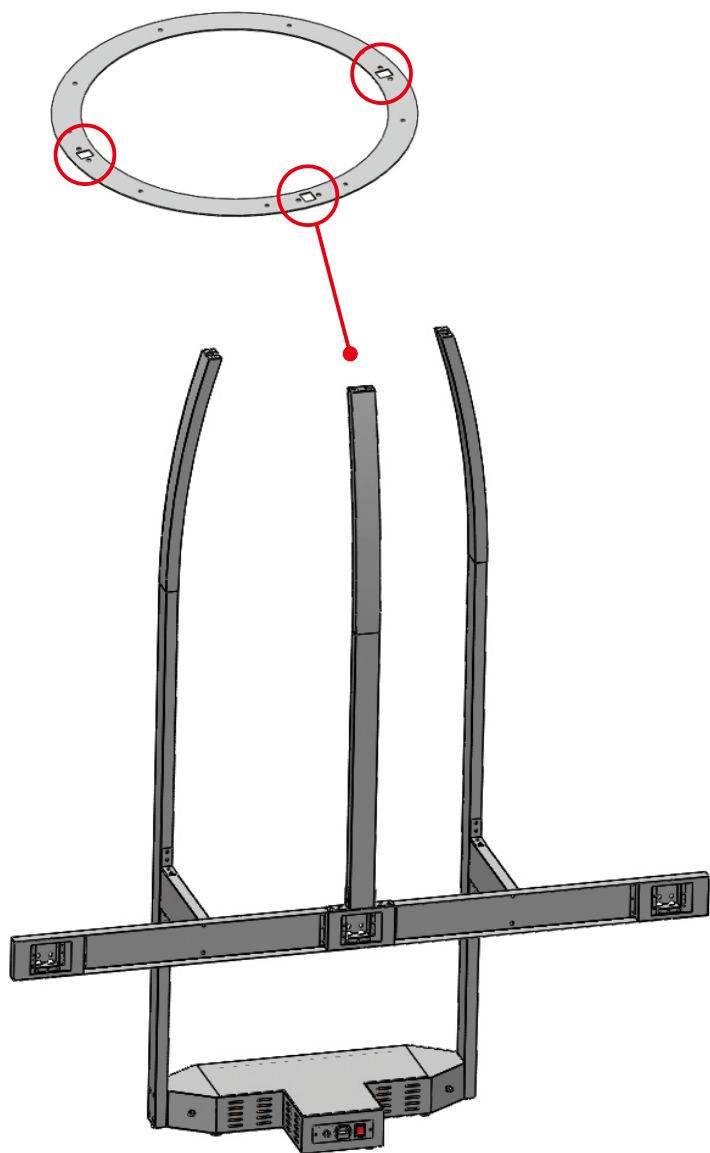


7. Assemble connecting ports
(2 x M6*30 hexagon inner screws)




8. Put machine cabinet on the connect bracket

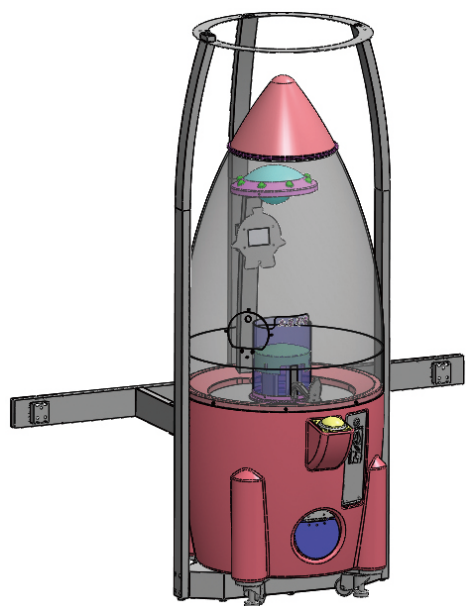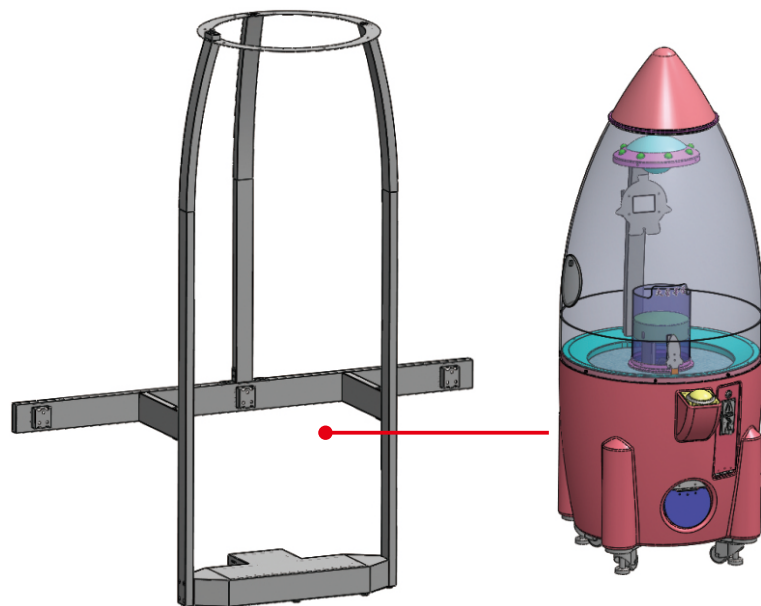


9. Fixed cabinet (3 x M6 screws)

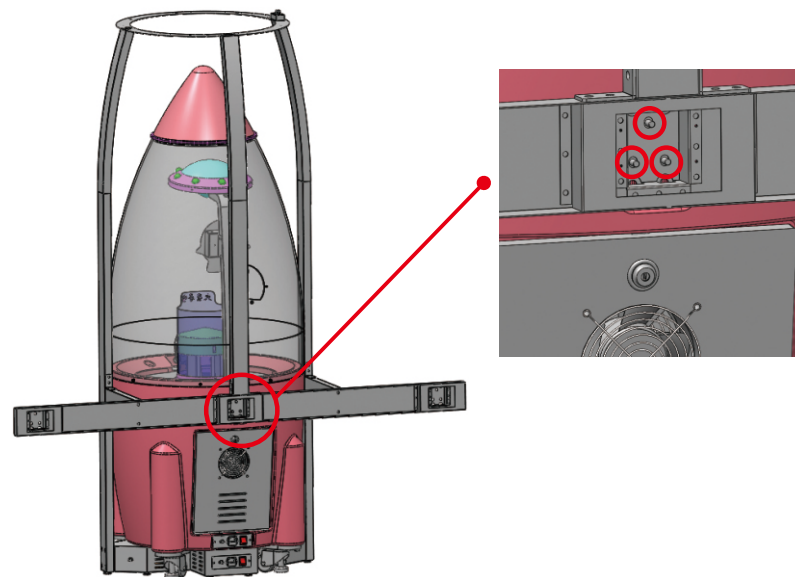


10. Repeat step 9

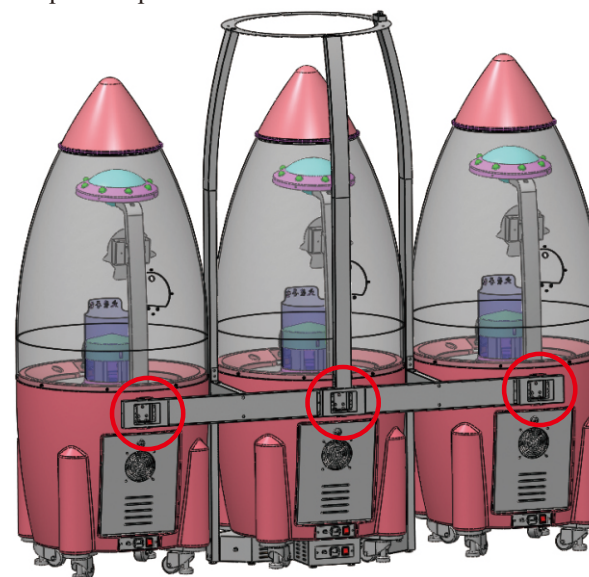


11. UFO light connect wire

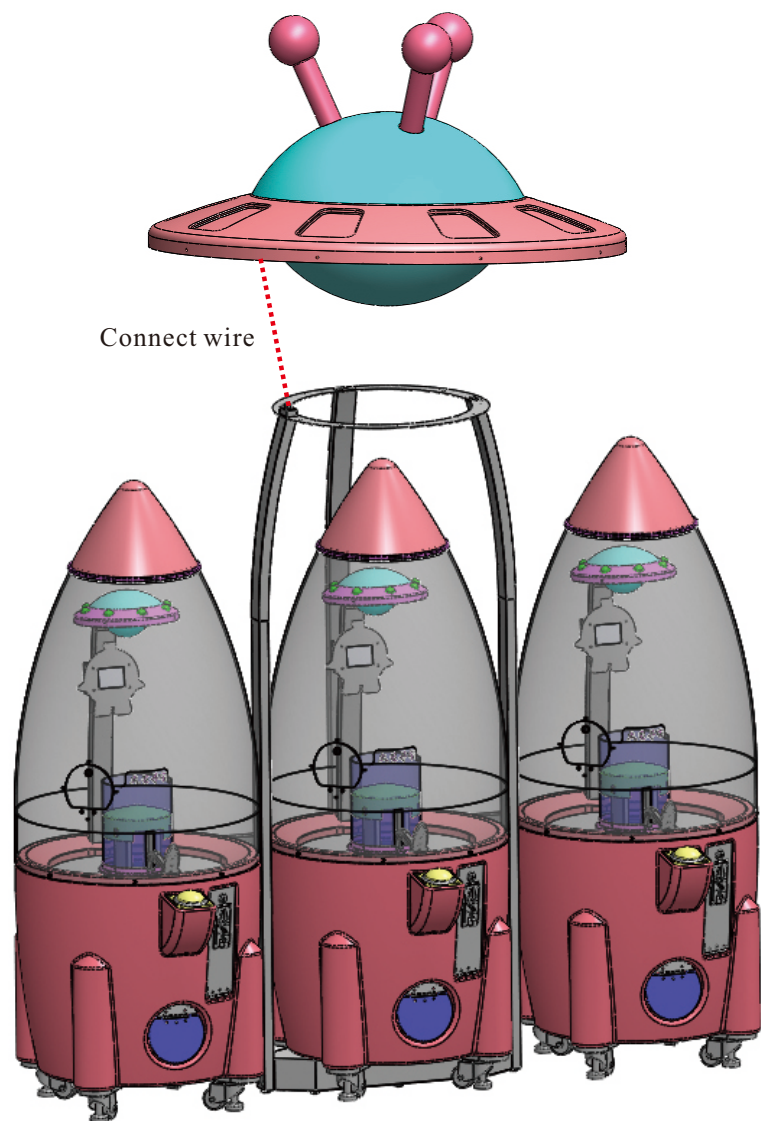

12. Fixed UFO decorative light (9 x M6*16 screws)

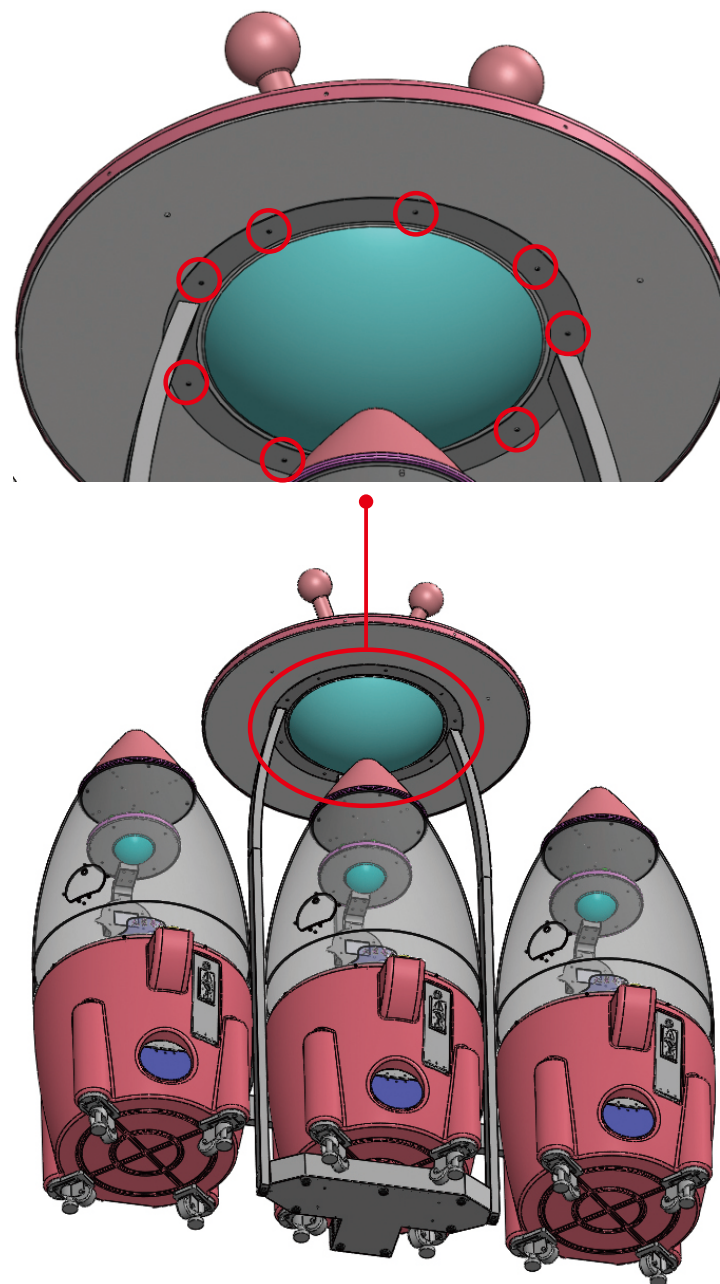

13. Wiring and connecting connectors

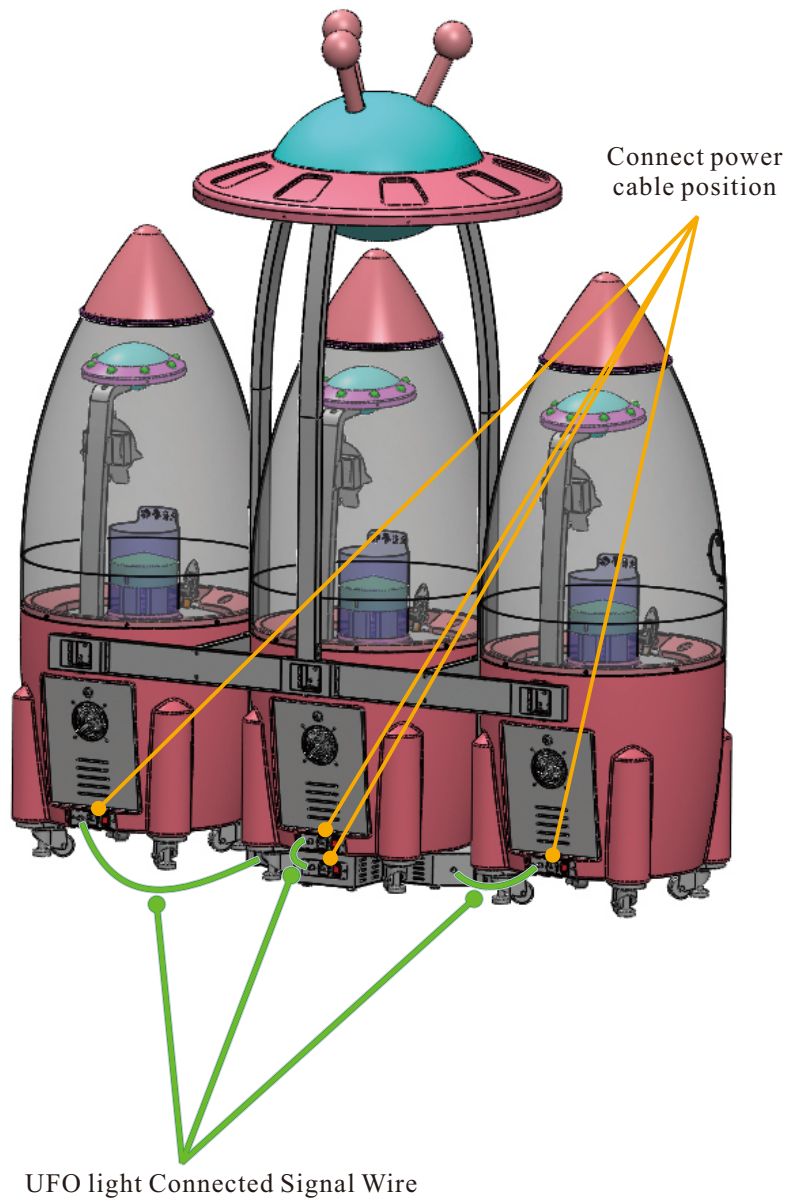

II. Specification And Parts

1. Technical Parameters

Name: Mars I (Triangle shape)
Size: D1530*W1655*H2370 (mm)
Weight: 200KGS
Voltage: AC220V
Power: 580W




Name: Mars I (One line shape)
Size: D855*W2220*H2370(mm)
Weight: 200KGS
Voltage: AC220V
Power: 580W

Tip: The prizes for this machine are smaller than 50mm diameter. (Notice for changing specification is not advised, due to upgrading in property and design)

2. Parts


| No. | Name | Quantity |
|-----|-------------------------|----------|
| 1 | Keys | 2 |
| 2 | Manual | 1 |
| 3 | Pusher reset mic-switch | 1 |
| 4 | No.2 brush | 1 |
| 5 | No.4 brush | 1 |
| 6 | M4 hexagonal wrench | 1 |

III. How To Play

1. Insert Coins 
2. Press Button to push prizes 
3. Collect any prizes from below 

Note: After insert coins, the prizes storage area will rise up a certain height and then fall down, which makes the prizes overflow on the wheel (turntable).

IV. Product Appearance

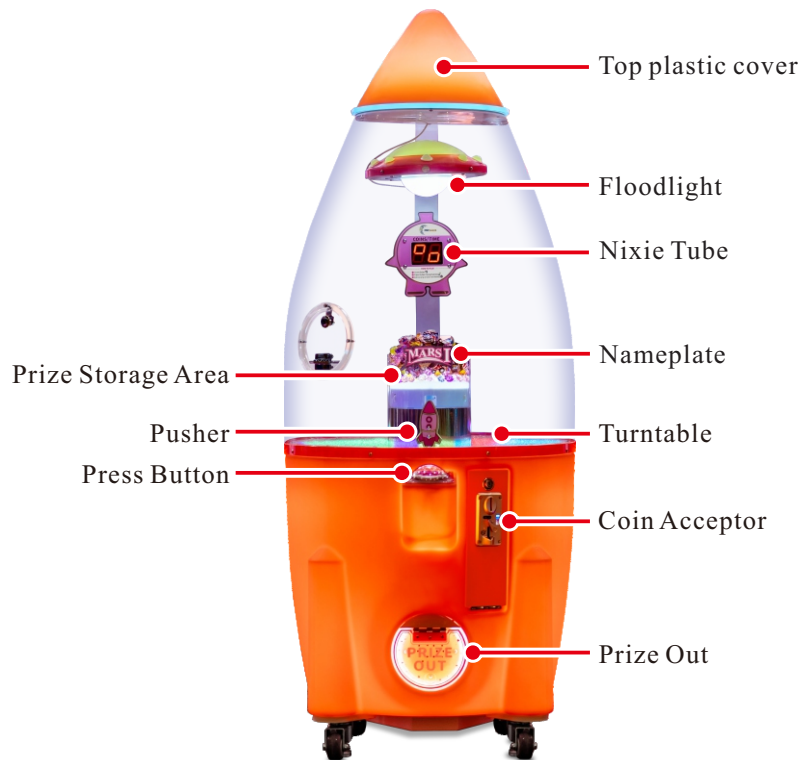





V. How To Refill Prizes

1. Open the door as the shown
2. Refill prizes into storage area




Note: Before adding gifts, please press and hold the “Reset” button to reset prizes storage area to the bottom.

VI. Structure Diagram

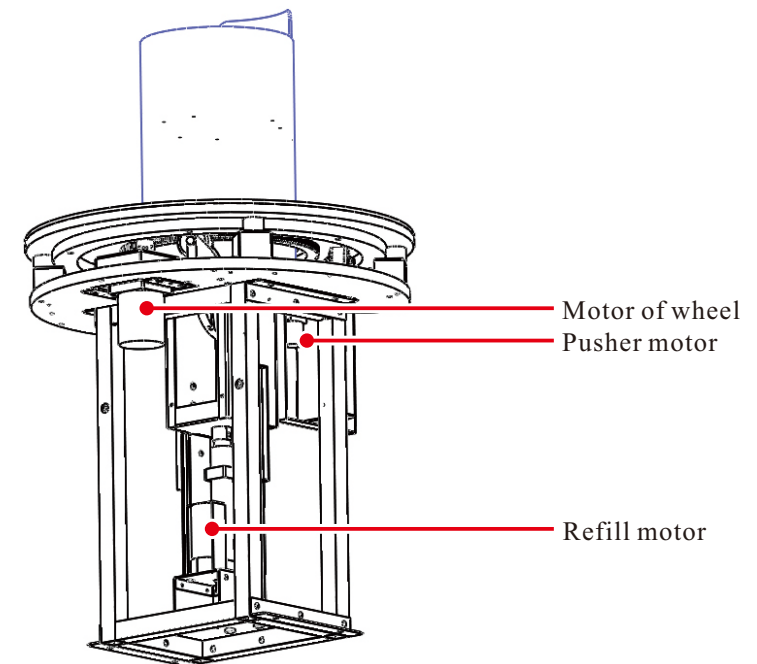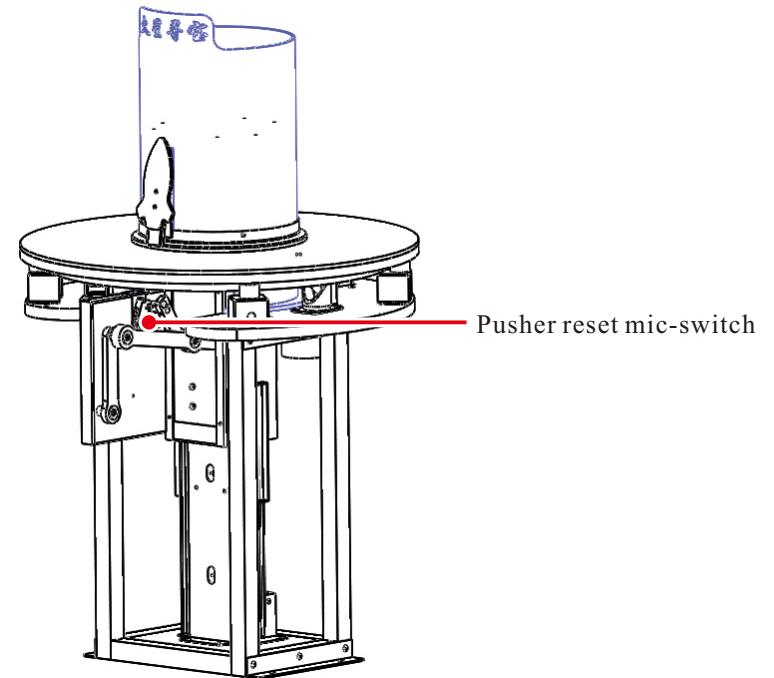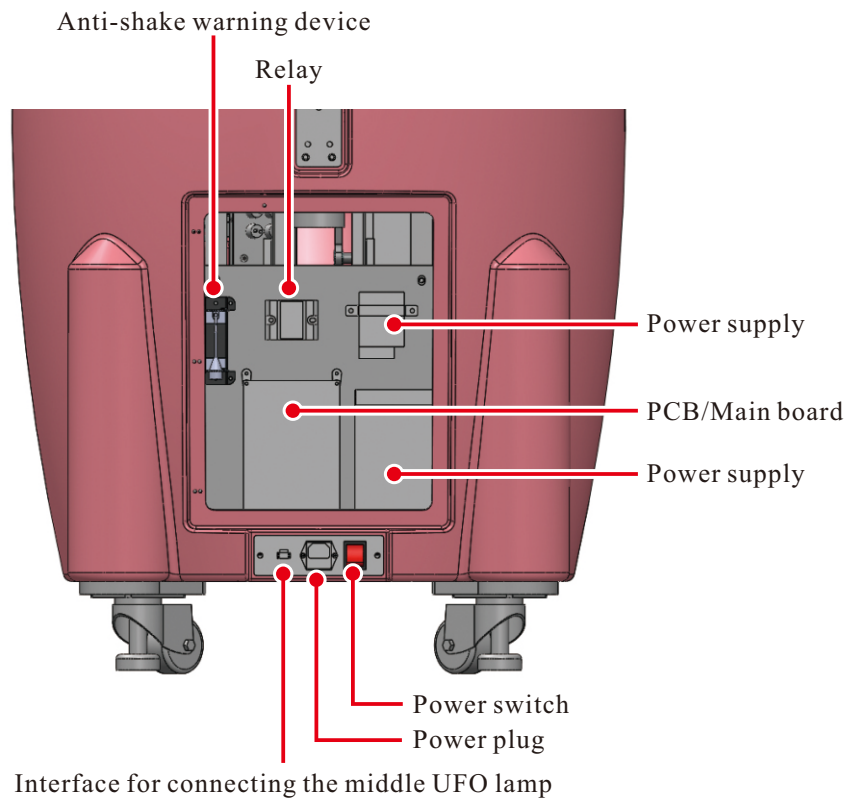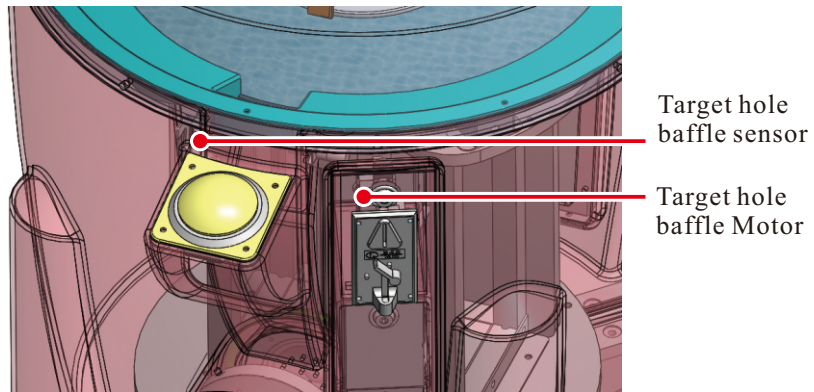

VII. Setting

1. Setting Button

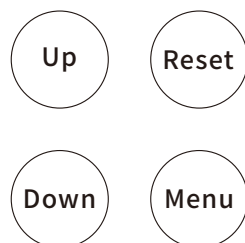

Note: Setting panel behind the coin acceptor

2. Setting Button Introduction

| Standby mode | | |
|----------------|------------------------|---|
| Name of button | Press | Long press button |
| Reset | None | Reset prizes storage area and go down to the bottom |
| Menu | Play one time for free | Access setting |
| Up | None | None |
| Down | None | None |

Long press “Menu” button into setting

| Setting options | | |
|-----------------|---------------------|---|
| Name of button | Press | Long press button |
| Reset | None | Reset prizes storage area and go down to the bottom |
| Menu | Switch P1/P2..... | Save and exit |
| Up | Adjust P1/P2 amount | None |
| Down | Adjust P1/P2 amount | None |

Note: P1/P2..... How to setting P1/P2, please refer to “How to set”

| The rising speed of the prizes storage area introduction | |
|--|--------|
| Degree of rising speed | Credit |
| 5 | 50 |
| 6 | 60 |
| 7 | 70 |
| 8 | 80 |
| 9 | 90 |
| 10 | 100 |
| 11 | 110 |
| 12 | 120 |
| 13 | 130 |
| 14 | 140 |
| 15 | 150 |
| 16 | 160 |
| 18 | 180 |
| 20 | 200 |
| 22 | 220 |
| 24 | 240 |
| 26 | 260 |
| 28 | 280 |
| 30 | 300 |

Note: credit: it means in how many credits that all the prizes will be overflow to the turntable

3. How To Set

A. Coin setting: P1

- (1) Long press “Menu” to access setting.
- (2) Press “ Menu” switch to “P1”.
- (3) Press “up”/ “down “ adjust the coins.
- (4) Long press “Menu” to save and exit.

B. Degree of prizes storage rising speed setting:P2

- (1) Long press “Menu” to access setting.
- (2) Press “ Menu” switch to “P2”.
- (3) Press “up”/ “down ” adjust the rising speed (The number is rising speed, if number is “5” that is 50 credits all prizes will be refilled to the turntable,More details please refer to “ The rising speed of the prizes storage area introduction”).
- (4) Long press “Menu” to save and exit.

C. Anti-shakewarning setting: P3

- (1) Long press “Menu” to access setting.
- (2) Press “ Menu” switch to “P3”.
- (3) Press UP/ DOWN to adjust warning level (The number on the screen is the warming level)
0: Turn off Anti-shake alarm
1: Low sensitivity alarm
2: Medium sensitivity alarm
3: High sensitivity alarm
4: Highest sensitivity alarm
- (4) Long press “Menu” to save and exit.

D. Prizes storage lighting switch setting: P4

- (1) Long press “Menu” to access setting.
 - (2) Press “ Menu” switch to “P4”.
 - (3) Press UP/DOWN to switch on/off, 1 is on, 0 is off.
 - (4) Long press “Menu” to save and exit.
- Note: Please turn off the lighting if you put some candies or snacks into storage area.

E. Volume setting: P5

- (1) Long press “Menu” to access setting.
- (2) Press “ Menu” switch to “P5”.
- (3) Press up/down to adjust volume (The larger the number, the higher the volume).
- (4) Long press “Menu” to save and exit.



VIII. Error Code

| Error code | Reason | Solution |
|------------|--|---|
| E1 | Start button damaged | Replace new start button |
| E2 | Pusher motor damaged or pusher switch damaged | 1. Check the wire whether it is loose or replace new pusher motor if the motor doesn't work. 2. Replace new reset micro-switch or check the pusher reset micro-switch whether it loose if the motor still works. |
| E3 | The upper limit sensor or the bottom limit sensor is damaged | Replace new refill motor |
| E5 | Shake alarm | After the machine's anti-shake device is not triggered, it will not alarm |
| E7 | Memory failure | Replace new PCB |


NOTE: When machine faults occur, please check parts' circuit whether loose or not.

IX. Circuit Diagram

Triangle shape/One line shape

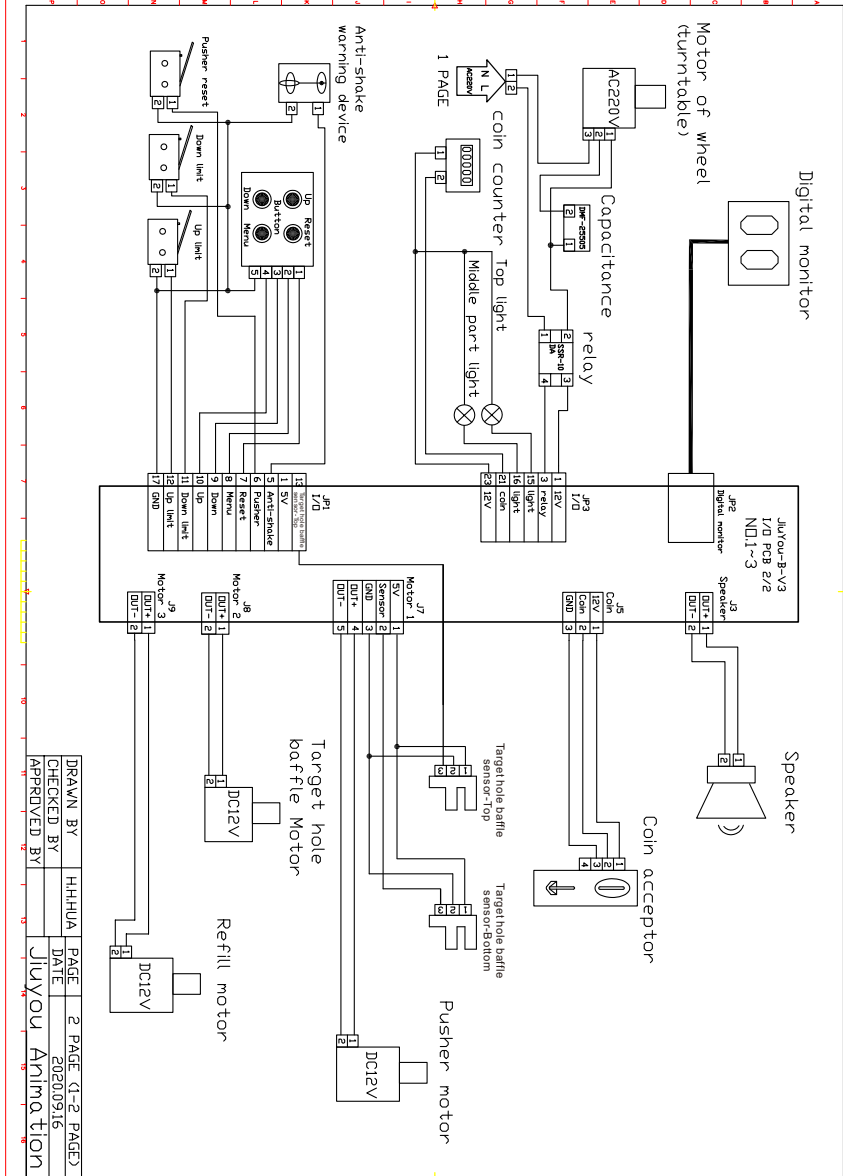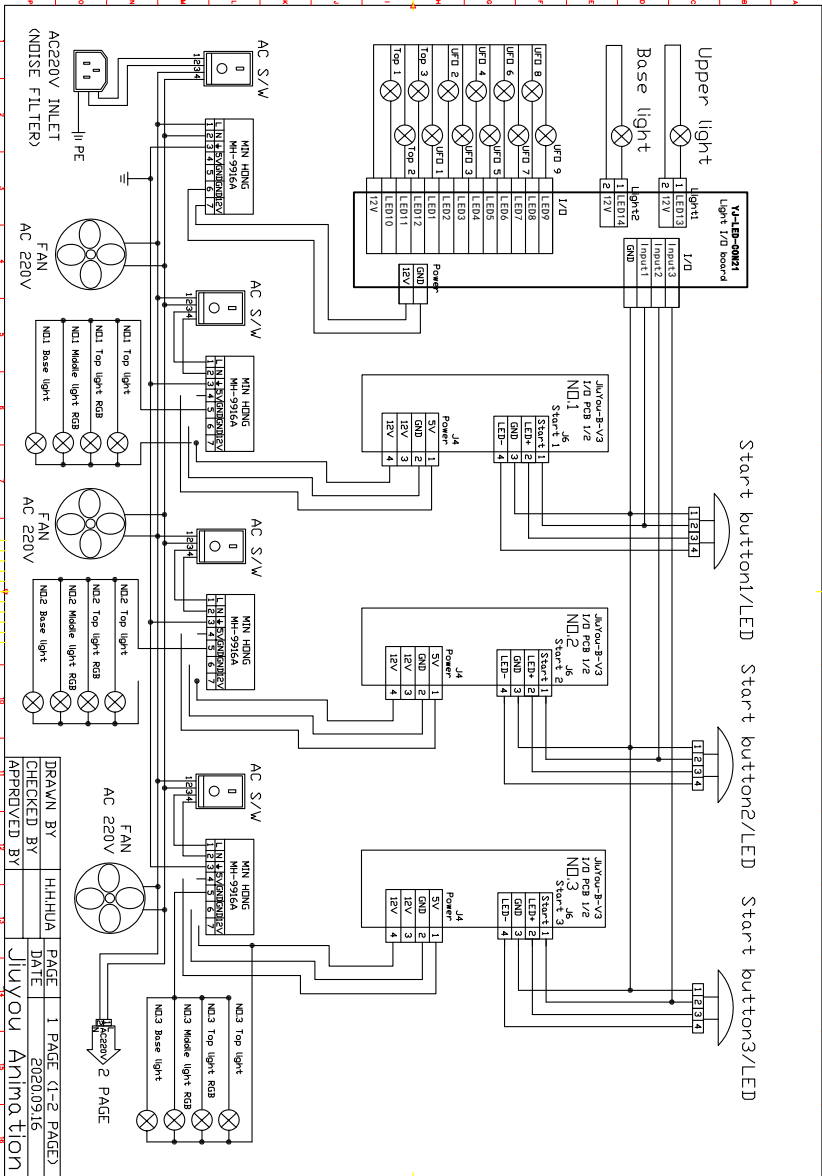

X. Circuit Diagram

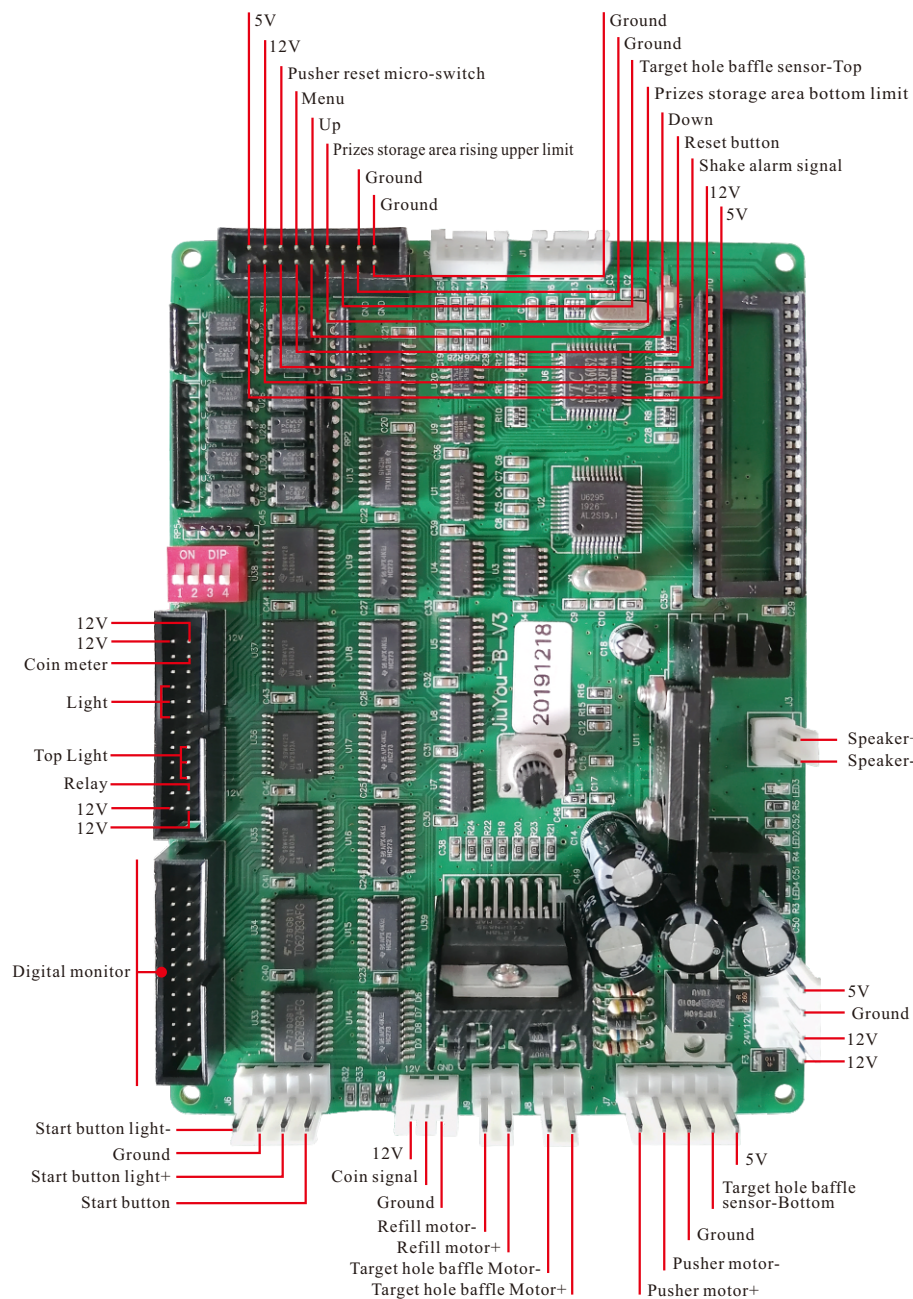

XI. Maintenance

1. When there is dirt on the outer of the machine, please wipe it with a soft dry cloth. If the dirt is quite serious, wipe it with a soft cloth with 5-6 times diluted detergent, and then wipe with a dry cloth.

2. Never use alcohol or volatile solvent-based liquids to wipe, which will damage its surface treatment paint. Do not use cloth containing chemical agents to wipe or place it on the machine for a long time.

XII. Warranty Terms

To ensure the consumers could use our products with rest assured and satisfaction, we will reasonably stipulate our after-sale service system in strict accordance with relevant laws and regulations issued by the state.

1. Due to product's particularity, the product won't be refund once sold.
2. For all machines we sold, we will provide all technical support, including how to check account, difficulty adjustment, reset, various troubleshooting.

3. One-year Warranty: All machines are guaranteed within one year for non-human damage after receiving machines (except for the consumable parts);

Life-long Free Maintenance: When the free replacement or free warranty service expires after one year, we will continue providing technical service, for the part that need to be replaced, only charge the part cost and the maintenance fee is free, and the buyer need to responsible for the express cost.

4. Warranty period starts from the date the buyer receives the machine.

5. Warranty doesn't cover one of the following factors:

- (1) All failures and damages caused by man-made, using in abnormal working environment, without following the manual to use, or without following the manual indication environment to use, etc.
- (2) Without our consent and permission, user disassembles, repairs, or modifies the product, etc.
- (3) Damage caused by poor transportation after purchasing the product.
- (4) Damage caused by other irresistible factors (such as flood, lightning stroke, earthquake, abnormal voltage, etc).
- (5) Normal use becomes old, abrasion, rupture or dip-dye etc.
- (6) Product that is not belong to ours (such as fake, counterfeit product).