

# Giant Prize Pod instructions

 


Please read the manual before using the machine !

Keep the manual in good condition !

## accessories

- 1 key
- 2 instructions
- 3 power line
- 4 microswitch
- 5 other

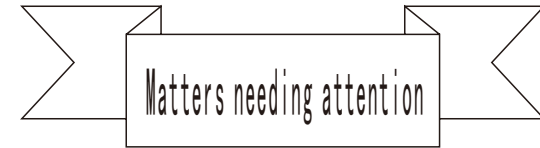

This machine is for indoor use. Do not place outdoors.  
Located indoors and should be avoided

Avoid the following conditions:

- 1 damp places
- 2 combustible or volatile matter around
- 3 sloping ground

Around 4 emergency exits, fire extinguishers and other  
fire fighting equipment

- 5 vibrate violent place

Be sure to turn off the power supply when maintenance,  
avoid electric shock or short circuit accident

8 without the company staff permission, does not tear  
open outfit,


To change or modification. In order to avoid improper  
operation or threat of damage products

Players and the safety of the people around you

9 attention to regular inspection and maintenance of  
this machine

10, when not mentioned in this manual, please be sure  
to relate thisThe company, According to the staff  
instructions.

 
Mainboard introduced

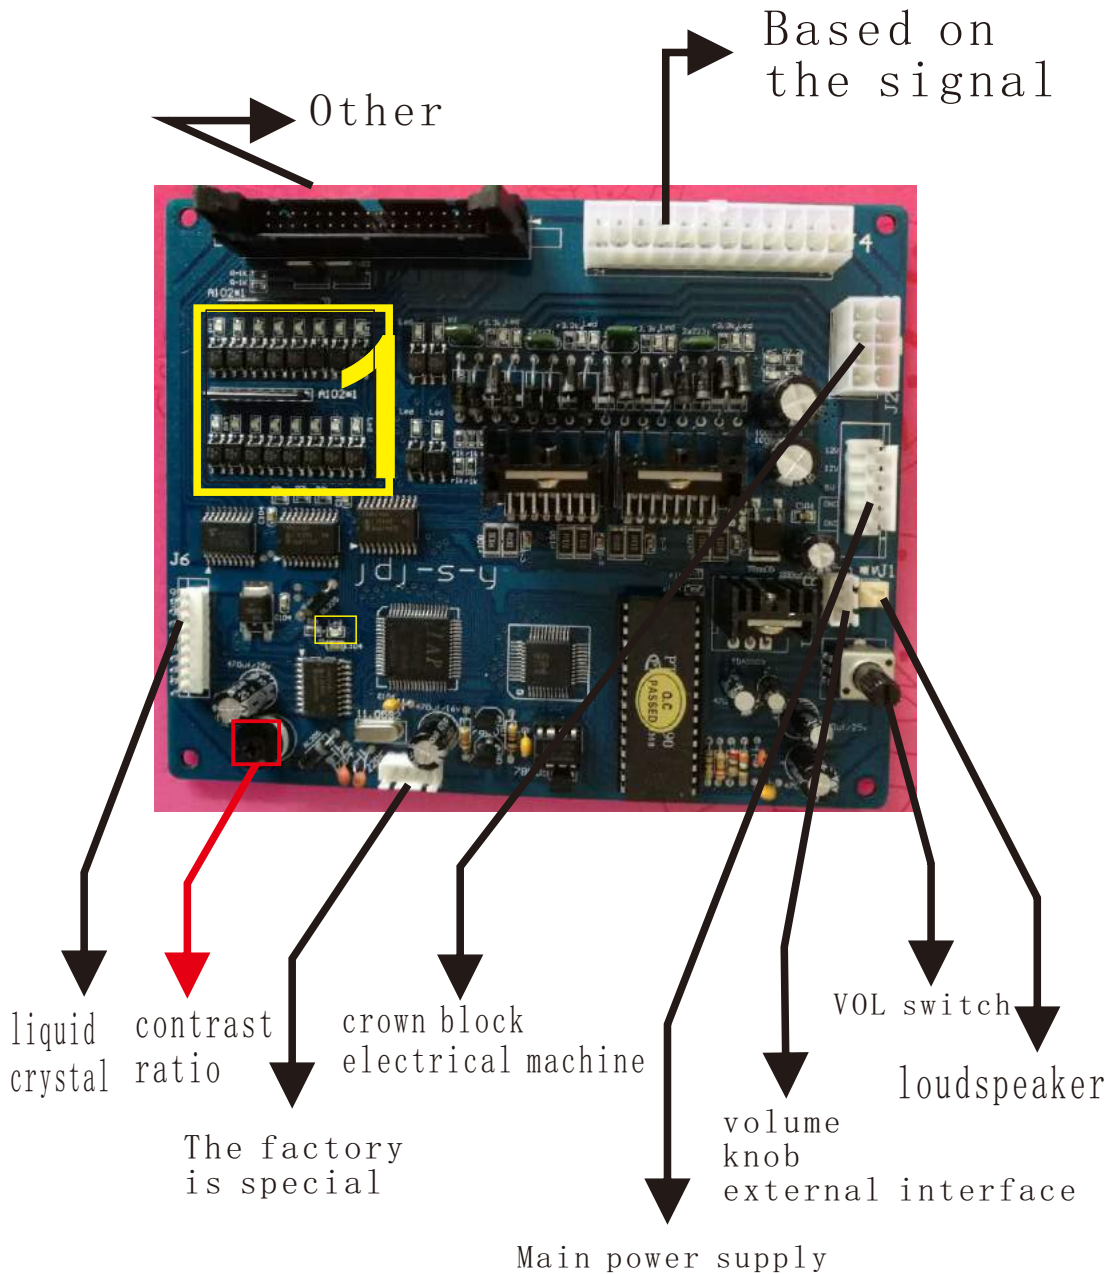

Mainboard introduced



- |                                      |                        |
|--------------------------------------|------------------------|
| 1                                    | 10                     |
| 2                                    | 11 standby normally on |
| 3 joystick forward instructions      | 12                     |
| 4 rocker backward directions         | 13                     |
| 5 rocker instructions to the left    | 14                     |
| 6 a handle to the right instructions | 15 standby normally on |
| 7 scissors forward instructions      | 16 standby normally on |
| 8 setup instructions                 |                        |

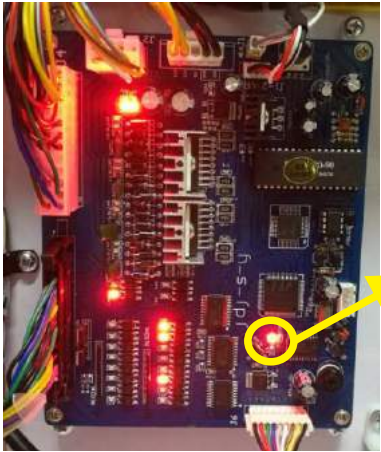 

The mainboard normal standby mode

Motherboard wiring instructions

Front counting optical eye	The winning light eyes				GND	GND	GND	12V	12V	12V	5V	Scissors motor	12V	12V	5V		
Rear locating light eyes	Scissors limit light eyes				GND	GND					5V	Before and after motor	12V	GND			


J4 note: Count light eye

J3 MOTOR12V

12V	income		12V	12V	12V	12V	GND	GND	GND	GND	GND						
	expend		button lamp		GND							COIN	COIN	SET	button	SET	


J5 Other

 Motherboard wiring instructions

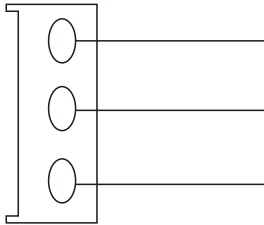


J1-2 External interface of volume knob

 J6 Liquid crystal connector

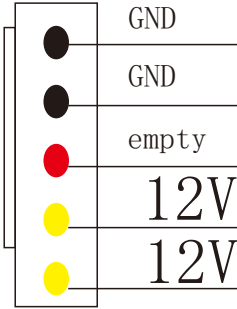

J2 Motherboard power supply

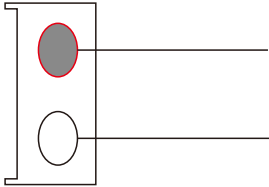 


J1 2510-2P The horn line



Motherboard operation (Settings) instructions

Under the normal standby screen, long press the "MODE" key to enter the setting (main menu).

 Standby screen

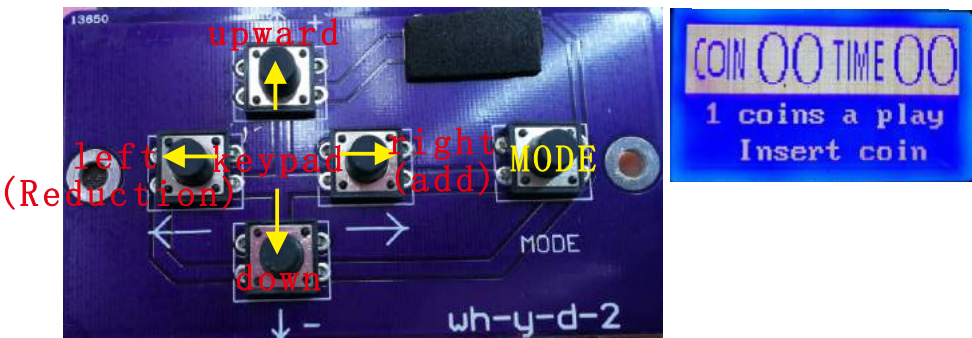

  Select the entry item by pressing the key plate up and down, press the confirm key to enter the setting, and press the + key for 2 seconds to open the door

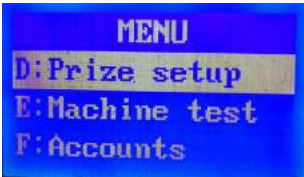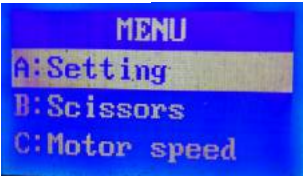

menu

Motherboard operation (Settings) instructions

A General Settings

Coin per play  
Just throw in a few game COINS and play it once

 
 
 
 
Game time  
Time per game

Music  
You can set on or off

Switch storage  
Optional to close  
If I pick a number that's what thenumber is, It's how many COINS you put in a row and you get one

Volume  
The bigger the number, the louderthe voice

Num.coins/bonus  
You can set on or off The number of COINS left on the machine after shutdown and restart will be reset

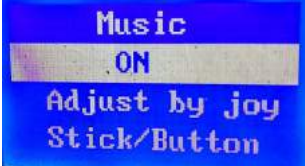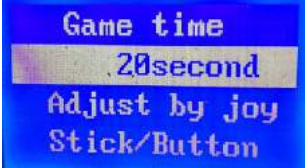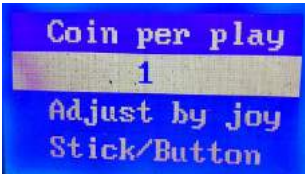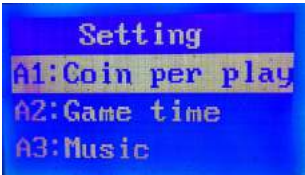



## Motherboard operation (Settings) instructions

### Scissors Settings

(this has been adjusted, the guests do not need to adjust)

### Offset value

The larger the offset, the greater the distance between the scissors and the gift string in the unwon game

 
 
### Winning position

Be sure to debug well before leaving the factory. If necessary, contact relevant personnel to get the adjusted video

Winning position(Special instructions):  
Click MOED here to enter the winning position for debugging.

steps:

Press + button, scissors automatically forward, scissors stop position is the winning position, at this time must ensure that scissors can cut to the hanging gift rope


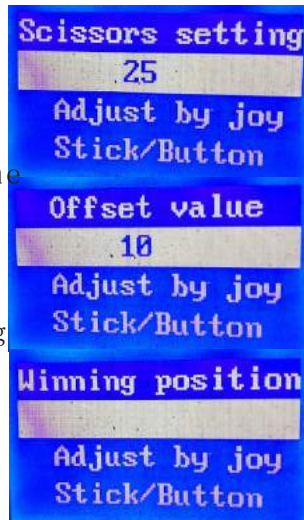
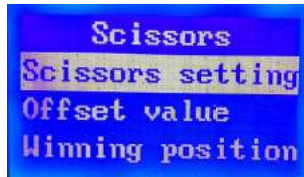


## Motherboard operation (Settings) instructions

### Motor speed:

Front and rear motor speed (Optional 1-5) , The larger the value, the faster the motor rotation.

   Left and right motor speed (Optional 1-5) , The larger the value, the faster the motor rotation.


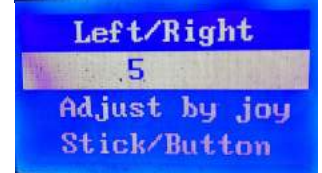
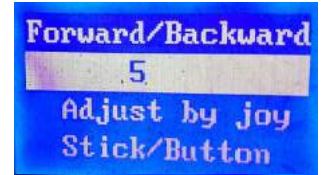
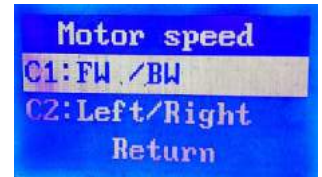


### Prize setup:

Mode:fixed way  
Random way  
Selling way

x1 N times out:Just throw in a few game COINS and play it once

    
Vending N out:When you choose the sale mode, The set value represents how much money to make a gift

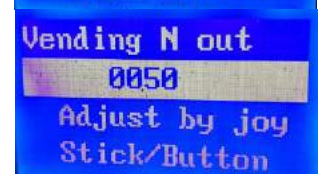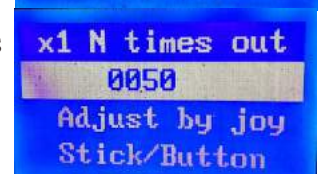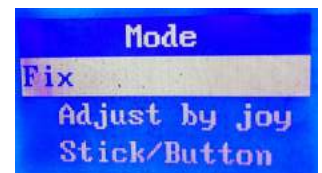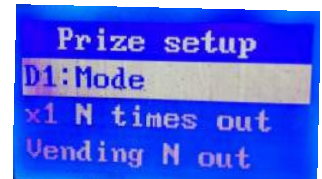

Motherboard operation (Settings) instructions


Machine test

 Factory test only

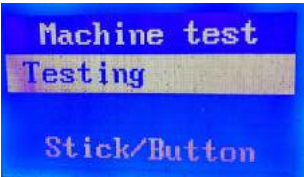


Accounts

 T income:the total amount of money invested in the machine throughout its history  
T payout:The total number of gifts given out in the historyof the machine  
C income:The amount of money invested since the last closing of accounts  
C payout:Gifts given since the last closing of accounts  
Total plays:The last prize has been awarded to players so far

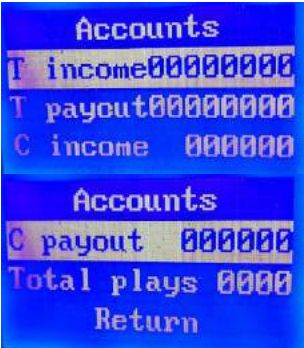

Accounts reset

 Native is to clear the accounts,  
The clearing content is:C income/  
C payout/Total plays

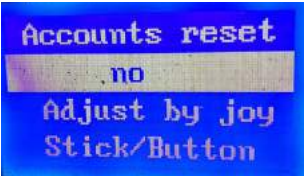

Motherboard operation (Settings) instructions

 
Free play

Self test, remember to close before business!!!



Factory reset

Try restoring factory Settings  
when a failure cannot be resolve

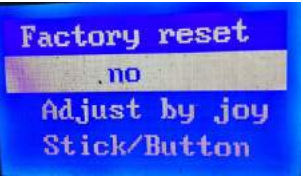


Play mode

Unattended:Factory resetTry  
restoring factory Settings  
when a failure cannot be resolve



 Attended:Notify the contact person  
to open the door after winning the  
prize

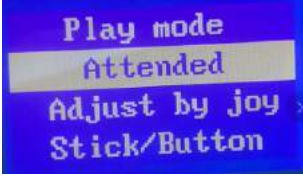

## Failure and maintenance



COIN OO TIME OO  
The door is open

Fault description:

The door is open

Maintenance:

1. Close the door
2. Replace the mainboard



COIN OO TIME OO  
No gift

Fault description:

No hanging gifts

Maintenance:

1. Hang up the gift and restart the machine

COIN OO TIME OO  
Call attendant

\*When H is chosen Attended, When a player gets a prize, they need to contact a staff member to open the machine door and take away the gift.

## Failure and maintenance



 
ERROR--3  
Scissors

Fault description:

Scissors not open

Maintenance:

1. Hang up the gift and restart the machine

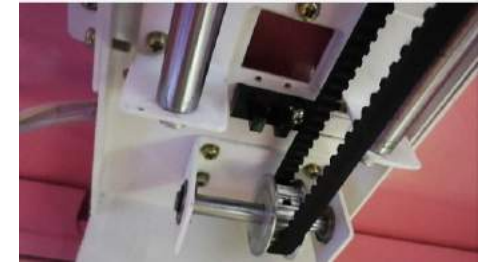


ERROR--6  
MOTOR BACK ERROR

Fault description:

The sensor not sense the registration point

Maintenance:

 1. Check for loose wiring
2. Replace the microswitch
3. Replace the mainboard

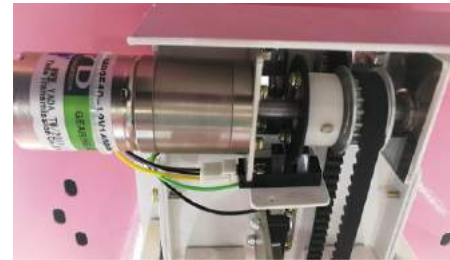

ERROR--12  
FORWARD, BACK, ER

Fault description:

The sensor not sense the registration point

Maintenance:

1. Check for loose wiring
2. Replace the microswitch
3. Replace the mainboard