


Clear memory Setting:

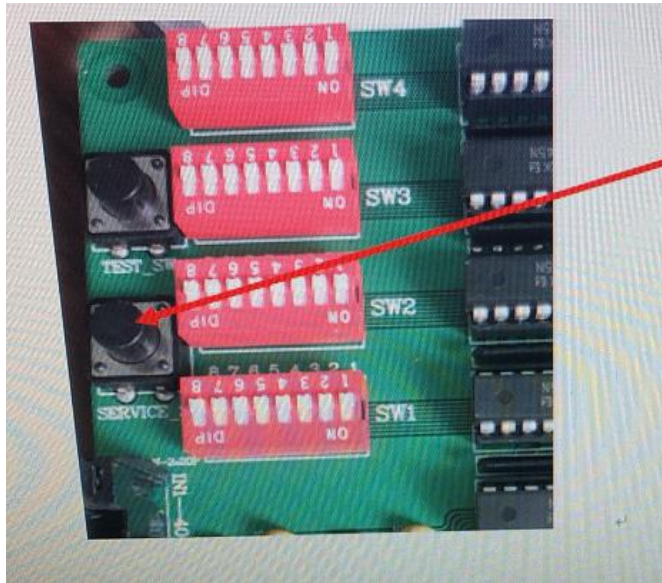

Turn off the machine normally, use hand to press the "service" button and do not release the finger, simultaneously turn on the machine, after 5 seconds, release the finger.