

Instruction of MMA Fitness Game Machine

 
Please read this instruction before use the machine!!!



Content:

1. Technical specifications.....	3
2. Terms of use	4
4. Menu scheme	6
5. Settings	7
6. Consignment content	8
7. Warranty terms	8
8. Spare parts	9
9. Contact	10

1. Technical specifications

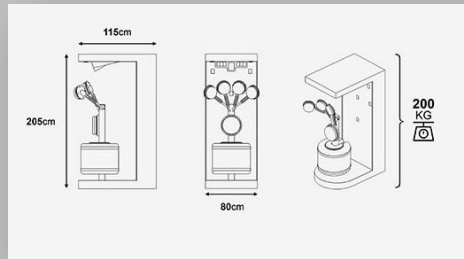

Rated power supply: 110-240V

Dimensions: 115 x 80 x 205cm

Weight: 200KG

Power consumption: 70W

2. Terms of use

The machine is powered with 230V/50Hz current. Always make sure the machine is unplugged before you do any maintenance. Only authorized staff may carry out any work on the machine. Under no circumstances should any plug or connector be pulled out or disconnected when the power is on. Make sure the plug and socket are properly grounded. Protect the mains cable against any damage. Oil and acid can damage the cable. Use proper extension cables and do not overload power sockets. Use only original spare parts.

3. Safety Precautions

High voltage can cause electric shock

Some parts may cause scalding

 
DO NOT put the machine on places uneven, sloping and easily be shaken.

Check wires and cables regularly.


Protect wires from damage by rats.

DO Not put the machine under the direct sunlight, it will damage the inside parts.

4. Menu scheme

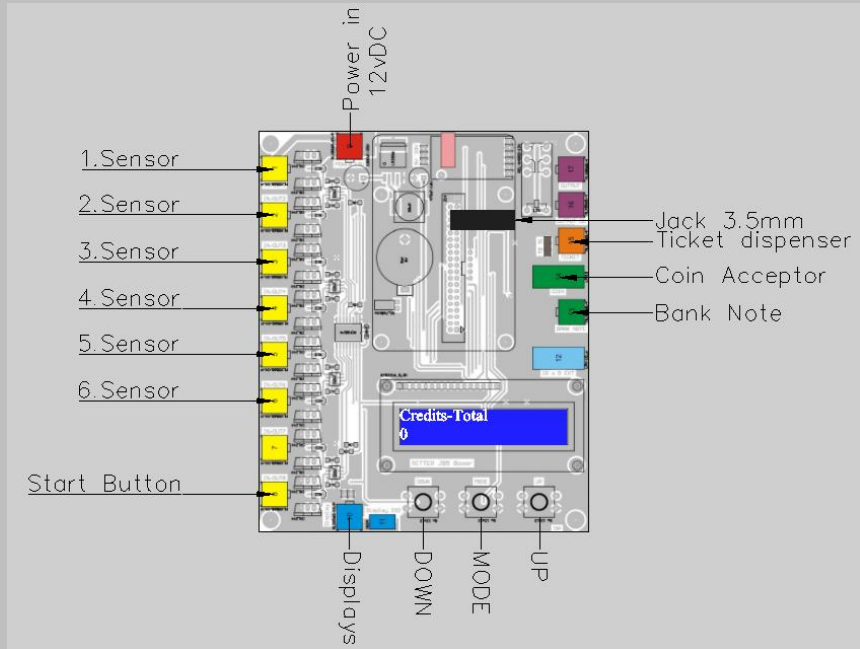

 5. Settings

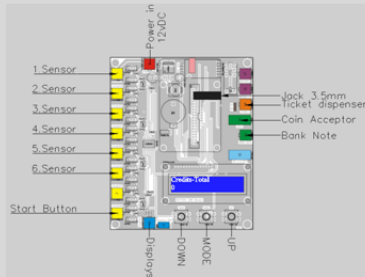

Tot. Work time
Credits-Total
Money amount
Money-Global
Ticket issued
Ticket-Global

Ritter

Menu Motherboard JB5

							Comments
1	Coin/Impulse	0,5					lowest accepted coin
2	Start-Impulse	2					after how many coins the device starts
3	Game time	00m30s					Game time
4	Activate Bonus	active					Active Bonus
		Inactive					Inactive Bonus
5	Set bonus	Imp4. Bon. 1	Imp1. Bon.0	Imp1. Bon.0	Back to menu		Set Bonus
6	Demo	volume	100				Demo volume
		Repeat time	600s				Repeat Demo
		Back to menu					
7	Points time	5					Speed time
8	Game time	5					Speeding up the game
9	Tickets	Active	Point/ticket	Highscore/ticket	Highscore/credit	Subtract point	Ticket setting
		Inactive	100	1	1	1	Ticket setting
10	Clear counts	Clear Points	Clr. Money amount	Clr.ticket count	Back to menu		Counts
		Cancel	Cancel	Cancel			
		Clear	Clear	Clear			
11	Change code	Write New Code					Change code
		0***					
12	Language	English					Language
		Polski					
13	Serial no.	sn					Serial number
14	Exit						Exit

6. Consignment content

- Device
- Set of keys (panel of coin acceptor)
- Front advertising
- Power cable (5m) (cashbox)
- Remote control (cashbox)

7. Warranty terms

Our device will be free from defects in electronics for a period of 12 months from the date of delivery.

Warranty include:

- Displays
- Mainboard
- Coin acceptor

- Power supplies
- LED driver
- LED lighting

Warranty terms do not cover parts not included above

It does not include damages which occurred due to misuse, unauthorized connection or modifications.

8. Spare parts

[Ritter/ Service](#)

9. Contact

Office

PPHU Ritter, ul. Rudzka 13B, 44-244 Żory, Poland

Tel: +48 602196802

Service

PPHU Ritter, ul. Mikołaja Reja 9, 44-244 Żory, Poland

+48 696533249

+48 602517542

+48 881968802

Type/Model.....

Device number.....

Electronic's name.....

Coin akceptor number.....

Buyers' name.....

Date of sell.....

