



PARTS: (561) 253-3311

888-538-1000
TEL (561) 588-5200
FAX (561) 493-2999
PARTS FAX (561) 493-2990
SERVICE: (561) 253-3310

51 Hypoluxo Rd.
Hypoluxo, FL 33462-4501
www.benchmarkgames.com

TICKET STATION



**PLEASE READ FIRST BEFORE
PLUGGING IN MACHINE**

ALL RIGHT RESERVED. PAT. PENDING

54MAN-01-D



Table of Contents

General Operation	2
Air Blast Cleaning System	3
Setup	4
Changing Ticket Bags	5
Loading Printer Paper	6
Tower Light Status	7
Ticket Taker General	7-9
Ticket Taker Overview	7-8
Ticket Taker Operation	9
Clearing a Ticket Jam	9
Troubleshooting Guide	10-13
Programming	14
Error Codes	16
Parts List	17-18
Schematics	19-20

Built for Reliability

The Benchmark Ticket Station is a compact ticket cash in machine that was engineered for reliability. Here are some of the key features you should be aware of:

1. Self Cleaning

- All of the opto sensors and barcode scanners are automatically cleaned with an air blast regularly

2. Independent Systems

- Each door contains a ticket taker system independent from one another. If there is a problem with one of the systems, the remaining systems will still operate

3. Redundant Power Supplies

- There are two power supplies in each ticket station.

4. Status Tower Light

- The ticket station features a tower light that will signal a printer problem (out of paper etc.), a ticket taker problem, and will let you know when the ticket bags are full

5. Low Dust Cutting

- The cutters in the Ticket Station are designed to cut the tickets like a pair of scissors for low dust creation, contributing to clean optos and barcode scanners.

1 to 4 Stations Field Expandable

Standard unit is complete and ready to add another station at any time. Just bolt the door on and plug it in.

Important Note:

Each of the access doors uses a power lockout switch. When the door is open, the ticket taker will not operate unless you manually pull the switch to turn it on. If you must activate the power while the door is open, use caution around the moving parts and belts in the ticket taker.


For more information and service details, please visit www.benchmarkgames.com.

Setup


1. Install Power Cord

The power cord can be run down and out the bottom of the machine or up and out the top of the machine.

- To run the cord out the bottom of the machine:
 1. Feed the power cord① through the lower power cord hole② in the bottom of the machine.
 2. Connect power cord to the power connector③ at the main harness.
-Be sure to secure the wires tight along the inside corner away from the scale floor④
 3. Plug power cord into a power receptacle. If a floor receptacle is used, position machine over the top of it.
- To run the cord up and out the top of the machine:
 1. Detach the power wires⑤ from the wire clips on the inside left corner of machine
 2. Run power wires up inside corner attaching into wire clips
 3. Remove wire plate screws⑥ and wire plate⑦
 4. Connect power cord to power connector⑧ on the main harness.
 5. Run the power cord up and out the top of the machine securing with wire clips.
 6. Replace wire plate and reattach with screws.

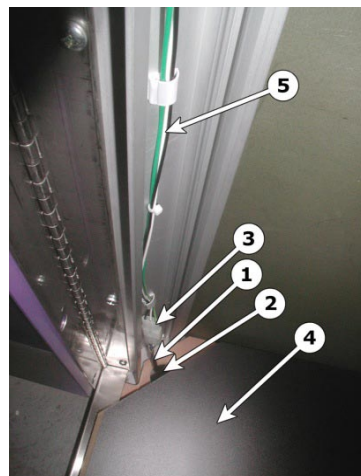


View inside looking down

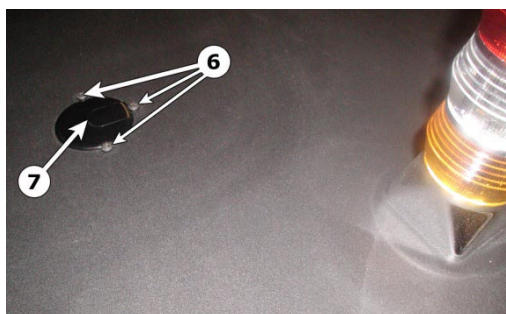


2. **Install ticket bags (see “Changing Ticket Bags” section of this manual).**
3. **Program barcode, machine number, etc. as desired (see “Programming section of this manual).**

View inside looking up

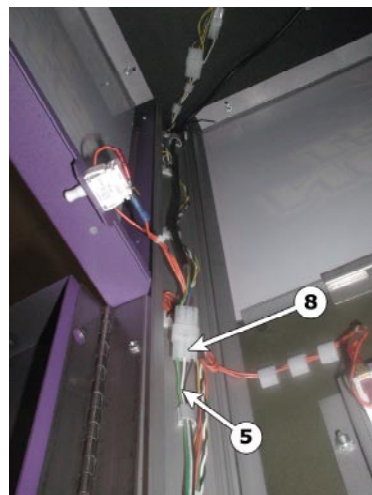

General Operation

1. Insert tickets into the ticket taker using the easy load ticket ramp①. The LED display② will indicate the number of tickets counted and the Print Receipt Button③ will flash.
2. When all of the tickets have been fed into the machine, press the Print receipt button and wait for the printer to completely print the receipt. The receipt will feed to the front of the printer bezel④ and stop.
3. Pull the receipt straight out.
- 4.

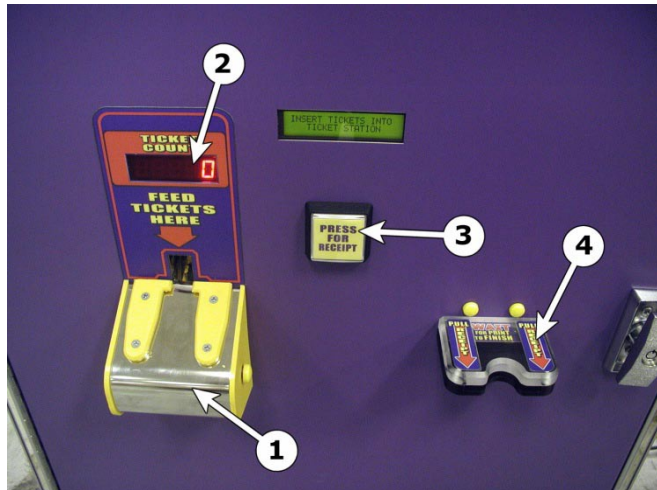

Air Blast Cleaning System


The Air blast cleaning system in the Ticket Station is comprised of an air pump, a relay, the main air hose plumbing, one air valve per ticket taker, and the local air hose plumbing that is distributed from a manifold after the air valve.

The cleaning cycle starts whenever any one of the ticket takers has taken 350 tickets. It restarts every 350 tickets thereafter.

At the beginning of the cleaning cycle, the pump runs for about 10 seconds to build pressure in the system. The air solenoid corresponding to the ticket taker that has taken the 350 tickets is then activated, releasing an air blast over the barcode scanners and opto sensors.

Changing Ticket Bags

1. Open front door.
2. Remove basket containment rail①.
3. Remove front ticket basket②, pull ticket bag through the bottom of the basket, and remove ticket bag.
4. Repeat step 3 for the rear ticket bag.
5. Replace ticket bags and basket containment rail.

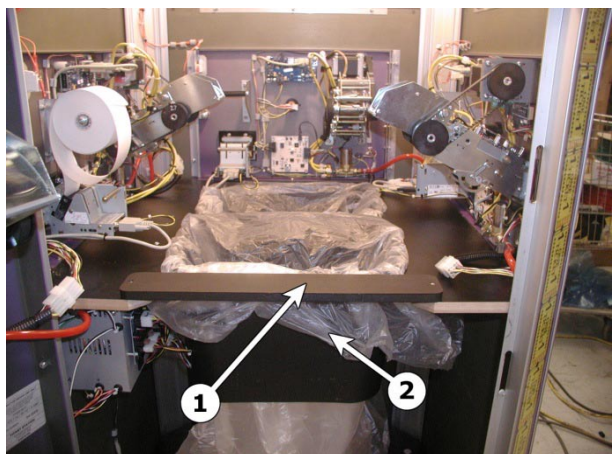


Loading Printer Paper

The printer will take different paper roll sizes. Small paper rolls (usually 7/16" diameter core) should be loaded on the small spindle② located on the printer assembly. The largest paper roll that can be used on the small spindle is 2-3/4" diameter. Large paper rolls (1 1/16" diameter core) are loaded on the large spindle④ located above the printer assembly on the door. The largest paper roll that can be used on the large spindle is 6".

Note: *The printer will only print on one side of the paper. Pay attention to the orientation of the paper roll when installing.*


Loading Small Rolls

1. Turn the roller release handle① counter clockwise ¼ turn so that the paper will be allowed to feed into the printer.
2. Load the paper onto the small spindle② so that the free end is fed from the bottom of the roll and over the guide rail③.
3. Feed paper as shown in the picture on the side of the printer.
4. Turn the roller release handle① clockwise ¼ turn into the ready position. The printer will automatically feed.
5. Tear excess from bezel.

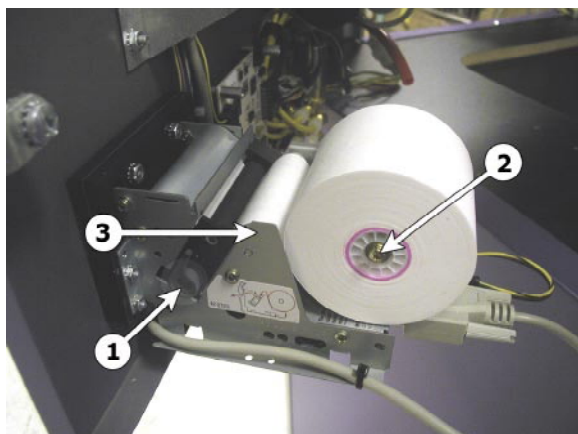

Loading Large Rolls

1. Turn the roller release handle① counter clockwise ¼ turn so that the paper will be allowed to feed into the printer.
2. Load the paper onto the large spindle④ with the free end of the paper facing down and away from the door.
3. Feed the paper under the small spindle②, over the ticket guide rail③ and into the printer.
4. Turn the roller release handle① clockwise ¼ turn into the ready position. The printer will automatically feed.
5. Tear excess from bezel.

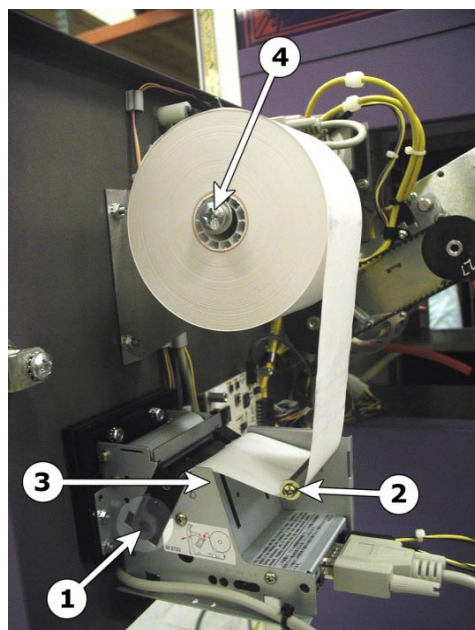

Tower Light Status

The tower light located on the top of the Ticket Station will let you know from across the room if something in the machine needs attention. You can further narrow the location of the problem from outside the machine by looking at the LCD display on each door. The door with the problem will have an error code on it. Here is what the lights indicate:

White Light Flashing indicates power and is used as an attraction so customers can easily locate the machine

White Light Solid indicates that it is time to change the bag containing discarded tickets.

Red Light Solid indicates that there is a ticket taker problem. Refer to troubleshooting section of this manual.

Yellow Light Solid indicates that there is a problem with the printer. This is most often seen when a printer need paper. If the printers do not need paper, refer to the troubleshooting section of this manual.


Ticket Taker General

Note: When a door is open for service, the lockout switch kills the 24V to the corresponding door. This keeps the ticket taker from operating for safety. If you must activate the power at the lockout switch for troubleshooting or programming, use caution around the ticket taker belts and cutters. ALWAYS STAY CLEAR OF THE TICKET CUTTERS.



Ticket Taker Overview

The ticket takers are comprised of 4 main parts plus the drive motor:


1. Ticket taker main body includes:
 - a. Ticket sense transmitter①
 - b. Lower steel roller②

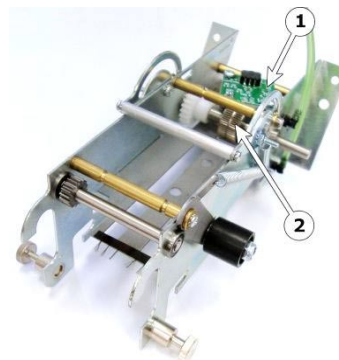

2. Ticket taker top assembly includes:
- a. Upper urethane roller①
 - b. Ticket sense opto receiver②
 - c. Notch sense opto receiver③
 - d. Upper barcode scanner④
 - e. Rollers⑤

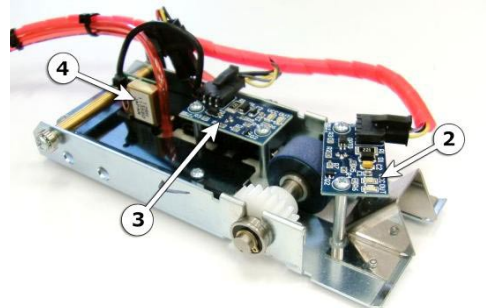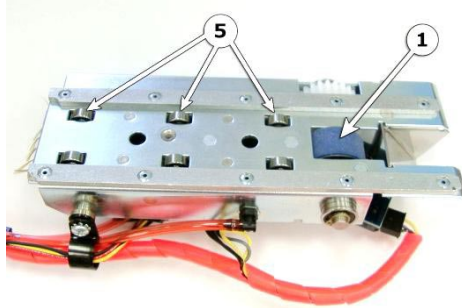


3. Ticket taker belt assembly includes:
- a. Ticket transport belts①
 - b. Lower barcode scanner②
 - c. Notch opto transmitter③

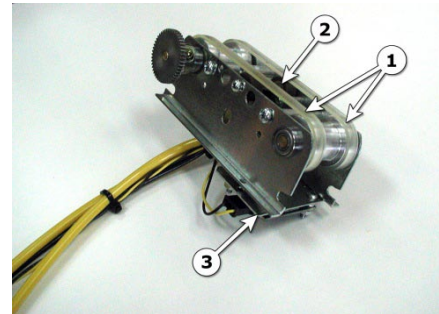

4. Ticket taker cutter assembly



5. Drive motor assembly includes:
- a. Stepper motor①
 - b. Hall effect sensor②


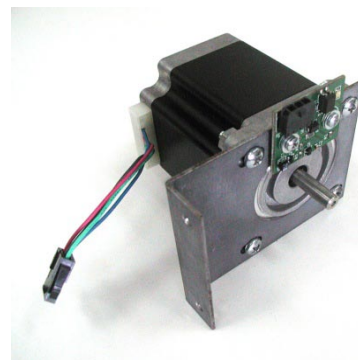


Ticket Taker Operation


When ticket is inserted the ticket taker, the ticket sense opto is interrupted which starts the ticket taker drive motor. The upper and lower rollers take the ticket(s) to the transport belts which carry the ticket(s) to the cutters. There are blue flat springs in the top assembly that push down on the 6 steel rollers in the top assembly keeping the ticket down on the transport belts. During the ticket travel over the transport belts, the notch opto senses the center notch of the tickets and the upper and lower side of the ticket is scanned for a barcode. We sense that the motor is turning with a hall effect sensor which is activated by a magnet located in the motor pulley passing over the circuit board. If there is no signal pulsing from the hall effect sensor when the motor is supposed to be running, the power to the motor will be turned off.

Clearing a Ticket Jam

1. Pull Captive Pins① to unlock cutter assembly(1 each side)
 - a. Pins can be secured in the retracted position by turning them counterclockwise while pulling
2. Tilt cutter assembly② down
3. Use brass handle③ to pull top assembly④ back and up to remove.
4. Remove jammed tickets.
5. Carefully replace top assembly.
6. Tilt cutter assembly up and re-secure captive pins.

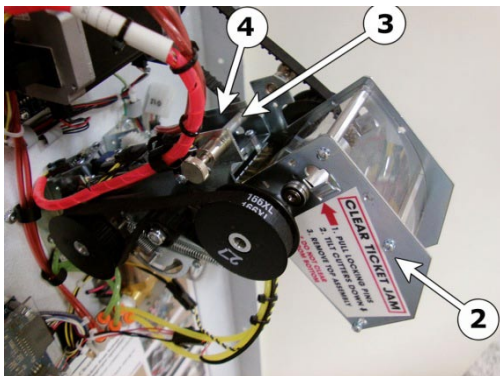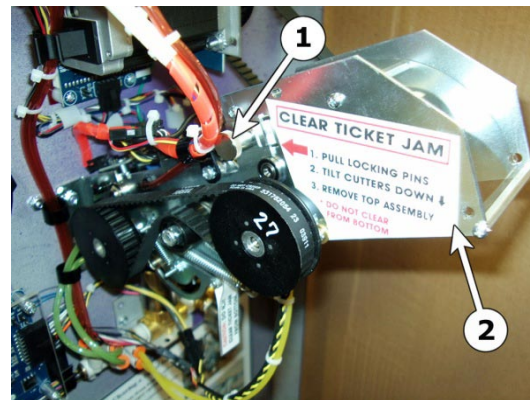


Cutter Assembly Shown Tilted Down

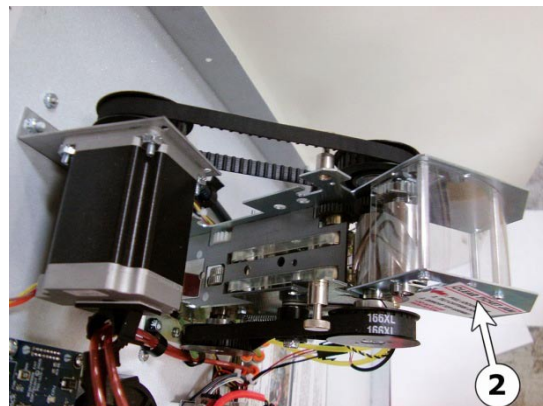

Top Assembly Shown Removed

Troubleshooting Guide


Note: There are (2) power distribution circuit boards mounted to the power supply housing. Each board holds (3) fuses, one 5V & two 12V. If there is a DC power problem, check these fuses.


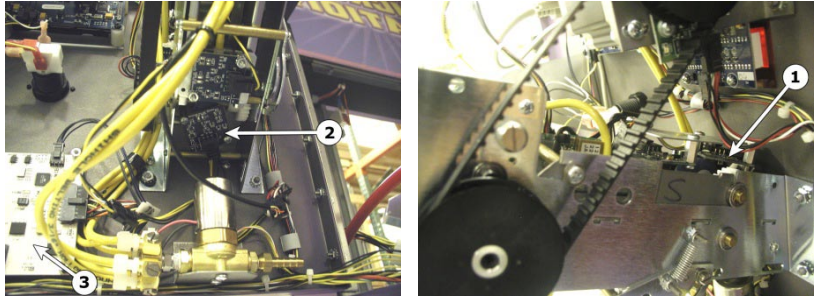
Ticket Taker will not start	<ol style="list-style-type: none"> 1. Check ticket sense opto pair. <u>LED</u> should come on and power output should pull to ground on <u>the ticket sense opto receiver</u>^① when opto is blocked by ticket. Check for good power and ground to <u>ticket sense opto transmitter</u>^② and <u>ticket sense opto receiver</u>^①. 2. Check for good signal <u>to ticket eater pcb</u>^③ input from <u>ticket sense opto receiver</u>^① 3. Check all ticket eater motor connections <div data-bbox="518 898 1328 1192">  </div>
Ticket Taker runs continuously	<ol style="list-style-type: none"> 1. Ticket sense opto path is blocked; check for ticket or debris. 2. Bad ticket sense opto receiver or transmitter.




**Ticket Taker
runs slowly
then stops**

Hall effect pcb① output not getting to the ticket eater board.

1. Check that when the motor is running, the LED② on the hall effect pcb① is flashing at least one time per motor revolution. If the LED does not flash:
 - a. Check to see if the motor pulley③ is tight on the motor shaft.
 - b. Check the distance of the motor pulley from the hall effect sensor pcb. There is a magnet on the inside of the motor pulley that activates the sensor every revolution. If the pulley is located too far from the sensor pcb, the magnetic strength will be too weak to activate the sensor.
 - c. Check voltage to the hall effect pcb
- If the LED does flash, check the output of the hall effect sensor pcb all the way to the ticket eater pcb

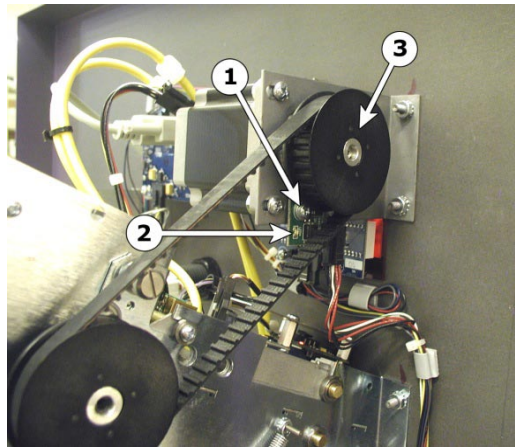

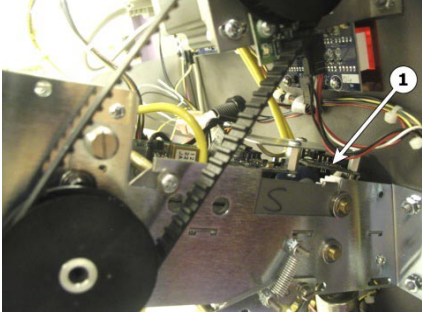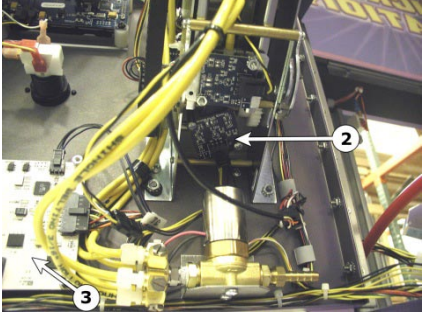Ticket Taker will not count with Ticket inserted in any direction	<ol style="list-style-type: none"> 1. Check notch count opto pair. <u>LED on notch opto receiver</u>① should flash as tickets are fed into ticket taker. <ol style="list-style-type: none"> a. If LED does not flash, check power to the <u>notch opto transmitter</u>② and notch opto receiver①. b. If LED is always on, something is blocking the opto path or the opto is dirty. 2. If LED does flash, check output of notch count opto all the way to the ticket eater pcb. 3. Check power to barcode pcb's and output all the way back to ticket eater pcb③. <div style="display: flex; justify-content: space-around; align-items: center;">   </div>
Ticket Taker counts accurately with barcode only up or only down	<ol style="list-style-type: none"> 1. Check power to and output from barcode scanner pcb corresponding to the side that does not work.
Ticket count is intermittent	<p>To help diagnose the problem, you can, through programming options, change the ticket verification to notch from barcode. If the ticket count becomes accurate, the problem is related to the barcode. If the count is still intermittent, the problem is probably related to the notch opto sensors.</p> <ol style="list-style-type: none"> 1. Bad tickets with poor printing or out of spec barcode. 2. Clean barcode scanner pcb's and opto notch transmitter and receivers (if this works check pump operation and pneumatic cleaning system for leaks). 3. Check for loose wire connections to barcode scanners or opto notch optos
Single tickets do not count accurately	<p>Check that tickets travel through the ticket taker at a consistent rate without stopping or slowing dramatically.</p> <ol style="list-style-type: none"> 1. Check for debris in ticket eater 2. Check for equal spring pressure from the flat springs, make sure they are not bent 3. Check ticket transport belts for tracking, breakage, stretch or extreme wear
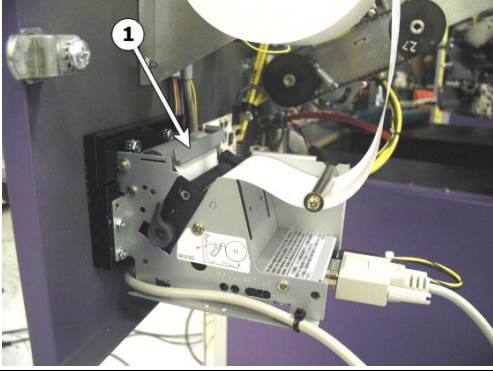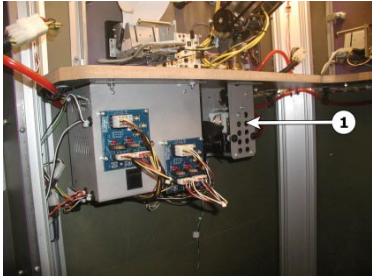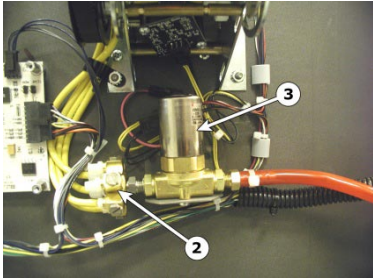
<p>Printer does not print</p>	<ol style="list-style-type: none"> 1. Out of paper 2. Paper installed backwards. The printer will only print on one side of the paper. See “Installing Printer Paper” section of this manual to verify correct installation. 3. <u>Paper guide plate</u>① pushed up. This plate needs to be all the way in the down position in order for the printer to print. If you find this in the up position, check to be sure receipt path is clear and that paper can be fed freely through the door. 
<p>Sensors need cleaning often</p>	<ol style="list-style-type: none"> 1. Make sure the <u>air pump</u>① comes on every 350 tickets. 2. Make sure there are no leaks in the main air plumbing 3. Make sure there are no leaks in the local air plumbing at the doors. Check air hose connections at the <u>air valve manifolds</u>②. <p>Note: If the problem is most often with one particular ticket taker, it is most likely a leak in the air plumbing system local to the door with the problem after the <u>air valve</u>③.</p> <div style="display: flex; justify-content: space-around;">   </div> <p>Shown with ticket baskets removed</p>


Programming

PLEASE NOTE: The lockout switch must be activated for all programming functions to work. Be sure to pull the plunger out to activate power to the ticket taker board before programming. Use caution as the ticket taker now has power.

If at any time the message “COMM. ERROR” is displayed, there is a problem with communications between the boards, and programming is not possible. If this condition occurs, check to be sure lockout switch is activated, or turn off the machine, check all harness connections, insure that the power switch is on to the Ticket Eater board, and turn on the machine.

1.) Entering Programming Mode

To enter program mode, press and hold the PROGRAM button② located on the back of the Printer Interface Board (the board with the LCD display). After 2 seconds, “PROGRAM MODE” will appear on LCD Display. At this time, release button. Momentarily, “PLEASE WAIT” will appear while the Totals retrieved. At this time “TOTAL TICKETS” with the number of tickets taken in will be displayed.

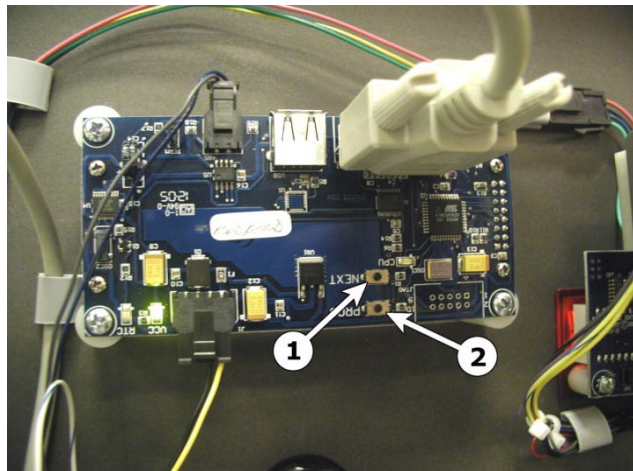

the
the
are

2.) TOTAL TICKETS

The total tickets taken in are displayed. The total will rollover to zero when it reaches 10,000,000. Depressing the PROGRAM button will reset the count to zero, and depressing the NEXT button① will display “LAST RECEIPT NUMBER”.

3.) LAST RECEIPT NUMBER

The last receipt number printed is displayed. This number automatically increments on every print, and rolls over to 1 after Receipt Number 9999. Depress the PROGRAM button to reset the receipt number, and depress the NEXT button to display “ENTER PROGRAM MODE?”

4.) “ENTER PROGRAM MODE?”

Depressing the PROGRAM button at this time will enter the area of Program Mode where parameters may be changed. Depressing the NEXT button will return the game to Run Mode.

5.) “DATE/TIME”

If Program Mode has been entered, the first setting is the Date and Time. The cursor will be flashing and at the Month position. Depressing the PROGRAM button will step through the month from 01 to 12. Depressing the NEXT button will move the cursor to the Day position. Enter the Day using the PROGRAM button. Depressing the NEXT button will move the cursor to the Year position. Depressing the PROGRAM button will increment the Year from 00 to 99. Depressing the NEXT button will move the Cursor the Hour position. The time is

set in 24-Hour format. Depressing the PROGRAM button will increment the Hour from 00 to 24 Hours. Depressing the NEXT button will move the cursor to the Minutes position. Depressing the PROGRAM button at this time will increment the minutes from 00 to 59. Depressing the NEXT button will go to the next option, “ENTER MACHINE NUMBER”

6.) “ENTER MACHINE NUMBER”

The machine number for each unit can be set from 0 to 99. Depressing the PROGRAM button will increment this value, and depressing the NEXT button will move to the next option, BarCode entry.

7.) “ENTER BARCODE?”

Depressing the PROGRAM button will allow for entry/editing of the 4-Digit Interleaved 2 of 5 barcode present on the ticket for ticket validation. Depressing the NEXT button will skip this step.

8.) “BARCODE: 0000”

This option sets the 4-Digit barcode. The flashing cursor will be over the first digit. Depressing the PROGRAM button will change the value of this digit from 0 to 9 then back to 0. Depressing the NEXT button will move the cursor to the next digit. Continue in this manner until the last digit is entered, then depressing the NEXT button will move to the next option, “TICKET SECURITY”.

9.) TICKET SECURITY

This option sets the Level of ticket barcode validation used. The PROGRAM button will change the value from 0 to 2, then back to 0, and the NEXT button will move to the next option, “SAFETY MODE”. The Three security levels are as follows:

- LEVEL 0 – Notch Only Validation, no Barcode required
- LEVEL 1 - Barcode Validation, Standard (Recommended)
- LEVEL 2 – Barcode Validation, HIGH Security

10.) SAFETY MODE

This option sets the Safety Level of the ticket eaters. Off is the normal mode and is recommended. ON lessens the power of the ticket eaters. Depressing the PROGRAM button changes the setting, and depressing the NEXT button moves to the next option, “TICKET VALUE”

11.) TICKET VALUE

This option sets the value of each ticket. The PROGRAM button will change the value from 1 to 5, then back to 1, and depressing the NEXT button moves to the next option, “RECEIPT CHECKDIGIT”

12.) RECEIPT CHECKDIGIT

This option turns the checkdigit added to the receipt barcode on or off. The PROGRAM button will change the setting, and depressing the NEXT button moves to the next option, “CARDSWIPE ENABLE”

13.) CARDSWIPE ENABLE

This option is selected if one of the many available cardswipe systems is interfaced with the Ticket Station. Depressing the PROGRAM button scrolls through the three options which are OFF (Normal Operation), PULSE, and SERIAL. Contact your cardswipe system supplier for more information. Depressing the NEXT button moves to the next option, “EDIT DISPLAY?”

14.) “EDIT DISPLAY?”

Depressing the PROGRAM button will allow for editing of the “WELCOME TO” message that is displayed on the machine. Depressing the NEXT button will skip this step and go to “EDIT RECEIPT?”. If the PROGRAM button is depressed, the display will show the current “WELCOME TO” message, and a flashing cursor will be at the beginning of the second line of the display, which is the only line that may be edited.

Editing the Display

Depressing the PROGRAM button will change the character at the flashing cursor. Every time the PROGRAM button is depressed, the next character in the list will be displayed. If the end of the list of characters is reached, the first in the list is displayed (refer to List of Characters at the end of this section). The line will appear exactly as it is edited, including leading and trailing spaces.

Depressing the NEXT button will move to the next character. If the flashing cursor is not at the beginning of the line and the BACK button is depressed, the flashing cursor will move to the previous character. Depressing the NEXT button when the flashing cursor is over the last character will save the displayed Welcome Message, and go to the next option, which is “EDIT RECEIPT?”

15.) “EDIT RECEIPT?”

Depressing the PROGRAM button will allow for editing of the first four lines of the receipt, as well as the line found after the ticket quantity is printed. Each of the five lines can be a maximum of 32 characters long, including spaces and punctuation.

Depressing the NEXT button will skip this step and go to “RE-ENTER PROGRAM MODE?”. If the PROGRAM button is depressed, the display will show the current first line of the receipt, and a flashing cursor will be at the beginning. The first twenty characters will be on the first line of the display, and the last twelve characters will be on the second line of the display. A black square will be displayed past the end of the 32 character line.

NOTE: If this option is selected, all 32 characters on all five lines must be stepped through to leave this option!

Editing the Receipt

All five lines on the receipt are edited in the same way. It is recommended that the information that is desired for the five lines be written out in advance to insure that the 32 character limit isn't exceeded. The lines should be edited with NO leading spaces. Each line will be automatically centered on the receipt when it is printed.

Depressing the PROGRAM button will change the character at the flashing cursor. Every time the PROGRAM button is depressed, the next character in the list will be displayed. If

the end of the list of characters is reached, the first in the list is displayed (refer to List of Characters at the end of this section).

Depressing the NEXT button will move to the next character. If the flashing cursor is not at the beginning of the line and the BACK button is depressed, the flashing cursor will move to the previous character. Depressing the NEXT button when the flashing cursor is to the left of the black square will save the line and the next line will be displayed for editing. If it is the fifth line, the next option will be shown, "RE-ENTER PROGRAM MODE?"

16.)RE-ENTER PROGRAM MODE?

This option gives you the opportunity to go through the programming settings again. Depressing the PROGRAM button will re-enter the Program Mode at the beginning, and depressing the NEXT button will leave Program Mode, and return to Run Mode.

CHARACTER LIST for DISPLAY and RECEIPT EDITING

[SPACE] ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < > ? @
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [*] ^
_ \ a b c d e f g h i j k l m n o p q r s t u v w x y z

ERROR CODES

The LCD Display on the Ticket Station will show common error codes to help in troubleshooting. There are two Types of errors; those associated with the Ticket Eater and those associated with the Printer. The LCD Display will show which type of error it is, "TICKET ERROR" or "PRINTER ERROR" along with the associated error number.

The Errors are as follows:

1.) Ticket Errors:

ERROR 1: Ticket Jam

2.) Printer Errors:

ERROR 1: Printer Platen Open

ERROR 2: Printer Out Of Paper

ERROR 3: Printer Head Temperature Abnormal

ERROR 4: Printer Cutter Cover Open (usually indicates a Paper Jam)














ERROR 5: Printer Communications Failure






NOTE:

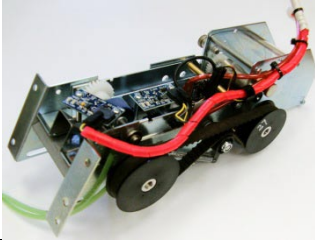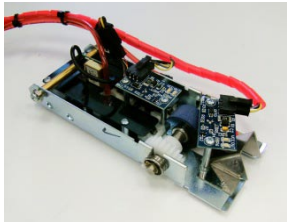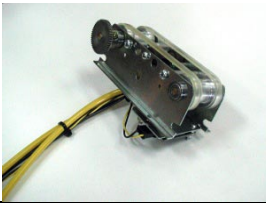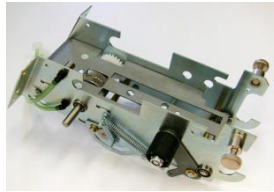If one of Errors 1 through 4 occur in the middle of a receipt print, the Printer may default to ERROR 5. Insure that all of the possible errors are checked before assuming a communications failure.

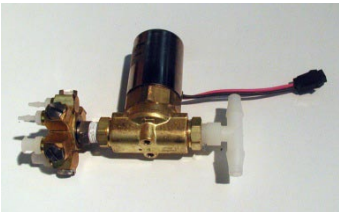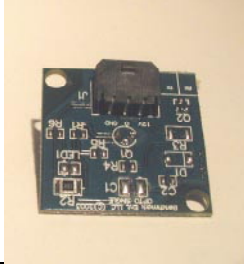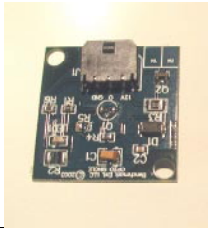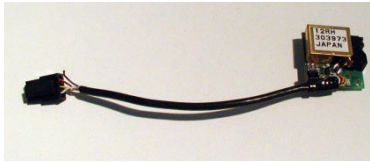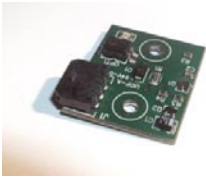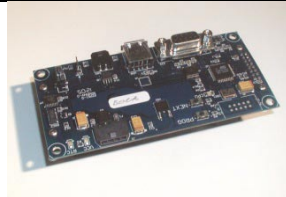
If the Printer is in the middle of printing the receipt and runs out of paper, it will retain the information for that receipt AS LONG AS POWER IS NOT TURNED OFF TO THE PRINTER. Reload the paper without turning the printer off and it will complete the printing of the last receipt.

Major Parts List


87-ASM-24 Ticket Taker		87-ASM-25 Ticket Taker Top	
87-ASM-26 Ticket Taker Belt Assy.		87-ASM-27 Ticket Taker Body	
87-ASM-28 Ticket Cutter		87-ASM-45 Ticket Taker Stepper Motor	
87-ASM-46 Solenoid Valve Assy.		PCB-020 Opto Transmitter Single	
PCB-021 Opto Receiver Single		PCB-022 Barcode Reader	
PCB-026 Hall Effect Sensor		PCB-027 Printer Driver Board	
PCB-028 Stepper driver single white series			

ELM-021 Lockout Switch		ELM-022 Tower Light, 3 color	
PCB-029 5 digit led display		ELM-023 Printer, Thermal	
MOT-004 Air Pump			


12 PIN CONNECTOR DOOR 1

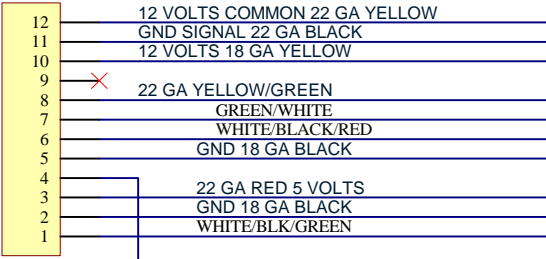


N CONNECTOR DOOR 2

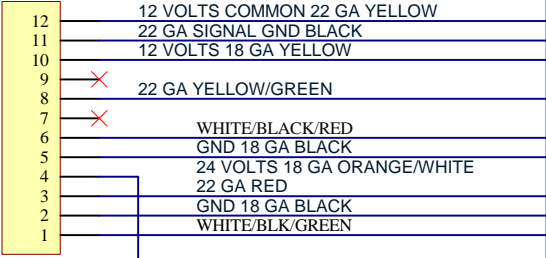

PIN CONNECTOR DOOR 3

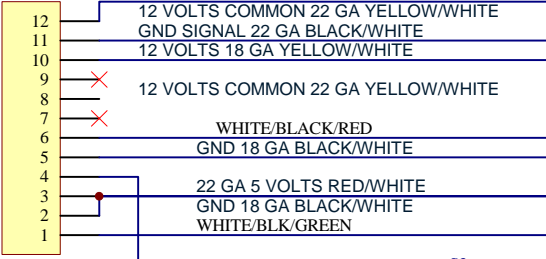

12 PIN CONNECTOR DOOR 4

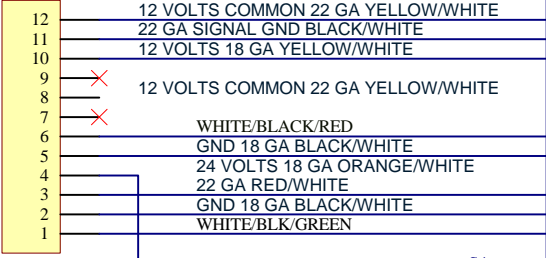


ORANGE

ORANGE/WHITE

FULL TICKET BAG


P1

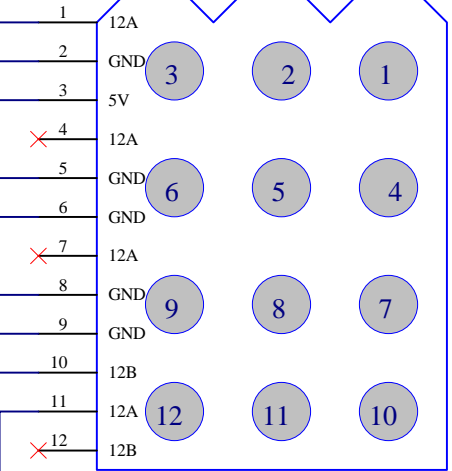

4 PIN MOLEX FEMALE


YELLOW

 24 VOLT POWER 1

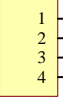

4 PIN MOLEX MALE MICRO_FIT

P2

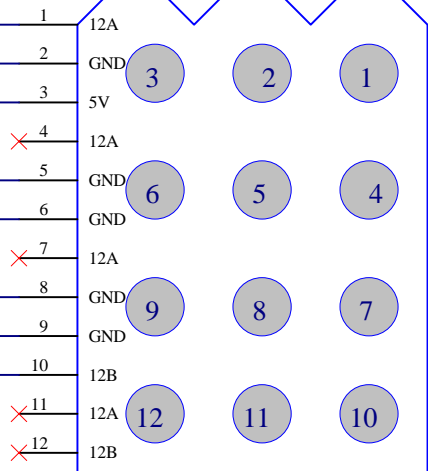

BOTTOM

WHITE/BLACK/GREI

OK/TICKETS FULL

MIDDLE

GREEN/WHITE

EATER FAULT


TOP

WHITE/BLACK/RI

YELLOW

ITEM NO.	Description	Part Number	QTY.
1	ticket guide bracket	87-SHM-25	1
2	ticket guide rail	87-MAC-04	2
3	ticket guide end plate	87-MAC-03	2
4	ticket guide shim	87-SHM-50	2
5	ticket guide attach rod	87-SCM-52	1
6	ticket guide rail lower	87-MAC-12	1
7	ticket guide rod	87-SCM-57	1
8	Mirrorticket guide rail lower	87-MAC-13	1
9	CR-FHMS 0.138-32x0.75x0.75-N	N/A	4
10	MSHXNUT 0.138-32-D-N	N/A	4
11	screwnail 13x750	N/A	2

REVISIONS			
ZONE	REV	DESCRIPTION	DATE
	A	Release to Production	07/28/07

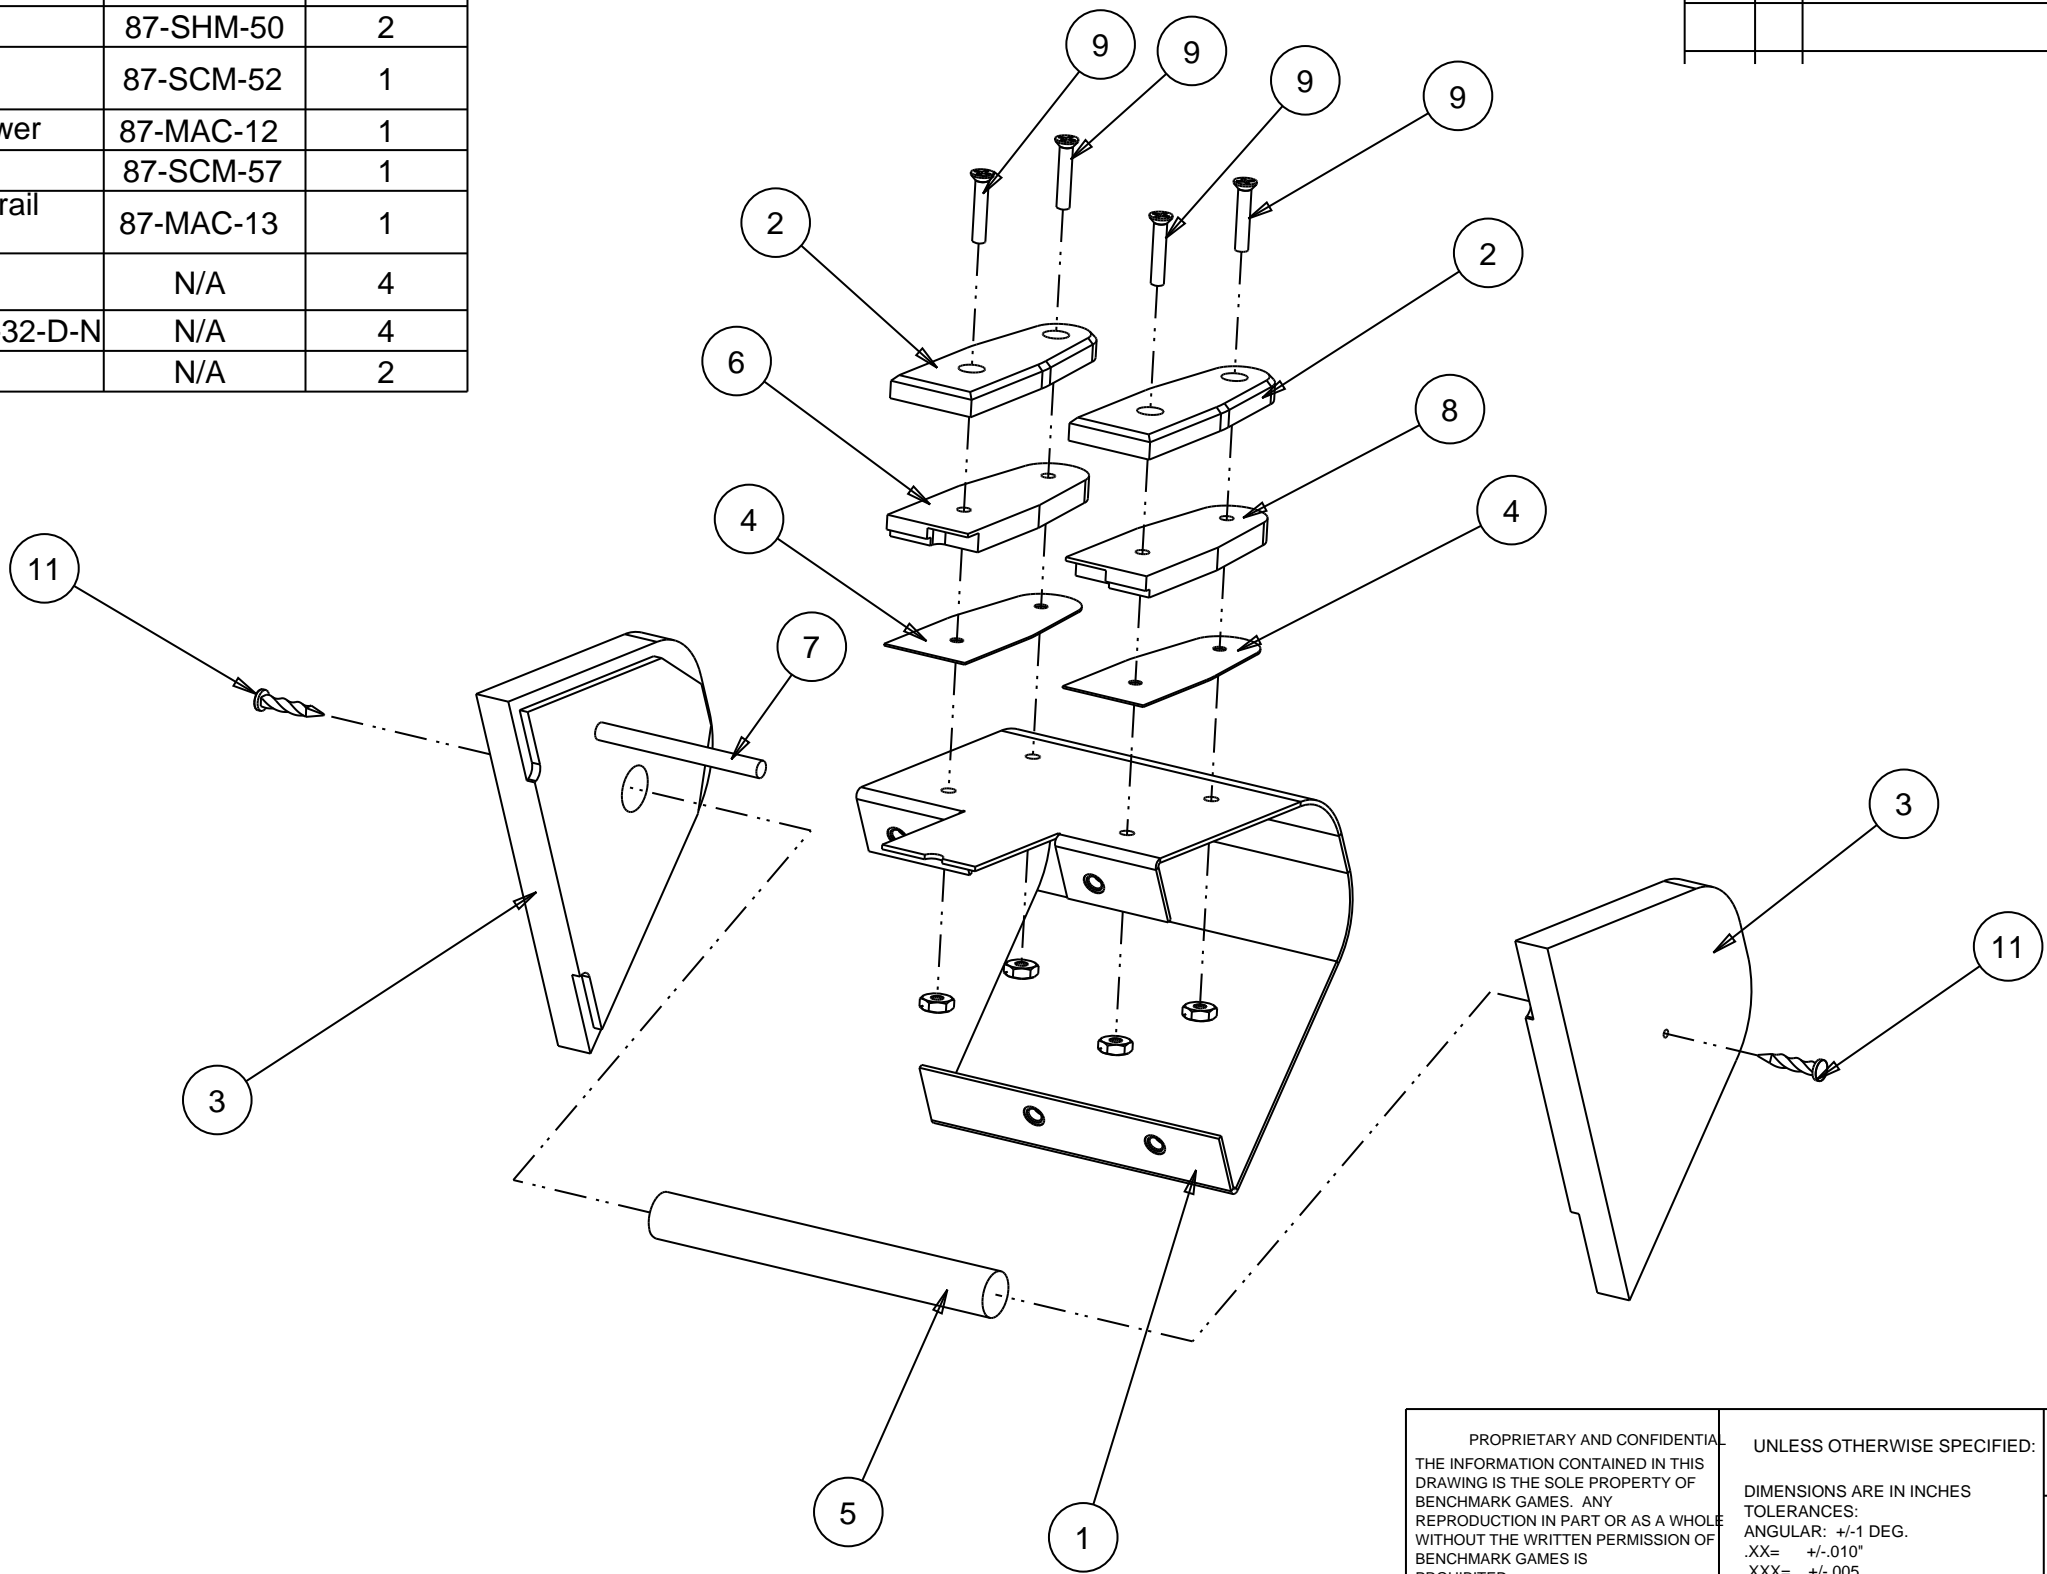



PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BENCHMARK GAMES. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF BENCHMARK GAMES IS PROHIBITED.	UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: ANGULAR: +/-1 DEG. .XX= +/-010" .XXX= +/-005 .XXXX= +/-003	Benchmark Games			
		TITLE: ticket guide assembly			
	DRAWN BY: S. Corso	COMMENTS:	SIZE	DWG. NO.	REV
	MATERIAL		B	54-ASM-04	
FINISH					
		SCALE: 1:2	WEIGHT:	SHEET 1 OF 1	

8

hDA BC "	D5FHBI A 69F	89G7 F-DHC B	YI d`cXY&#E H M
%	\$, +G<A \$%%	hW_YhYUHYf hcd`Wcj Yf gla`fc`Yf	%
&	5: 6A 5`%&*&`! \$"&) \$\$! '\$) \$\$\$!` \$"%&) \$!`%&G-B 7 2&&		&
'	\$, +G<A \$) (hW_YhYUHYf h`bbY`V`c`W`	%
(WUV`YSWUa dS&) \$		%
)	\$, +5GA \$+(VYUfjb[`Uggm hW_YhYUHYf hcd`	*
*	(!`\$!`"% , \YII`" % @	<YI` GdUWfRS: :	(
+	(!(\$!`"%&)`DDA G		(
,	(!(\$!`"&) \$`DDA G		(
-	*!`' &I`") \$\$`DDA G		&
%\$	&!) *`I`"&) \$`DDA G		&
%%	fj YfS\$- (I &) \$` Xca Y`ghY`d`UHYX		%\$
%&	`&`<YI`Bi h	`&`<YI`Bi h	(
%	6&+`"%! B5%&)		&
%(\$, +A 57 \$(&	hW_YhHU`Yf fc`Yf WcbHU`ba Ybh d`UHY	%
%)	D7 6\$&&	VUfWcXY` gWUb` @G5A`%&	%
%"	\$, +G7 A \$%)	hW_YhYUHYf hcd`Wcj Yf gdUWf	%
%"	\$, , +G7 A \$&&	g`ci`XYf k`Ug`Yf, *	&
%	\$, +5GA \$`\$	fc`Yf`hcd`	%
%-	D7 6\$`*	c`dhc` fYWj`Yf ga`U` fc`Yf	&
&\$	\$, +A 57 \$`-`	U`j`ba Ybh d`UHY	%
&%	\$, +G<A %\$`	ZUhgd`fjb[hW_YhYUHYf hcd`fc`Yf \U`Z	%
&&	; 9B \$%\$	U`f`Zmb[`Z %#,"`VUfVYX hcd`%\$!`&A	&
&`	&!) *I`"% , \YII`" % @	<YI` GdUWfRS: :	%
&(\$, +G<A %\$&	ZUhgd`fjb[hW_YhYUHYf hcd`fc`Yf	%
&)	\$, +D@5 \$\$&	hUW` d`UghW	&

5

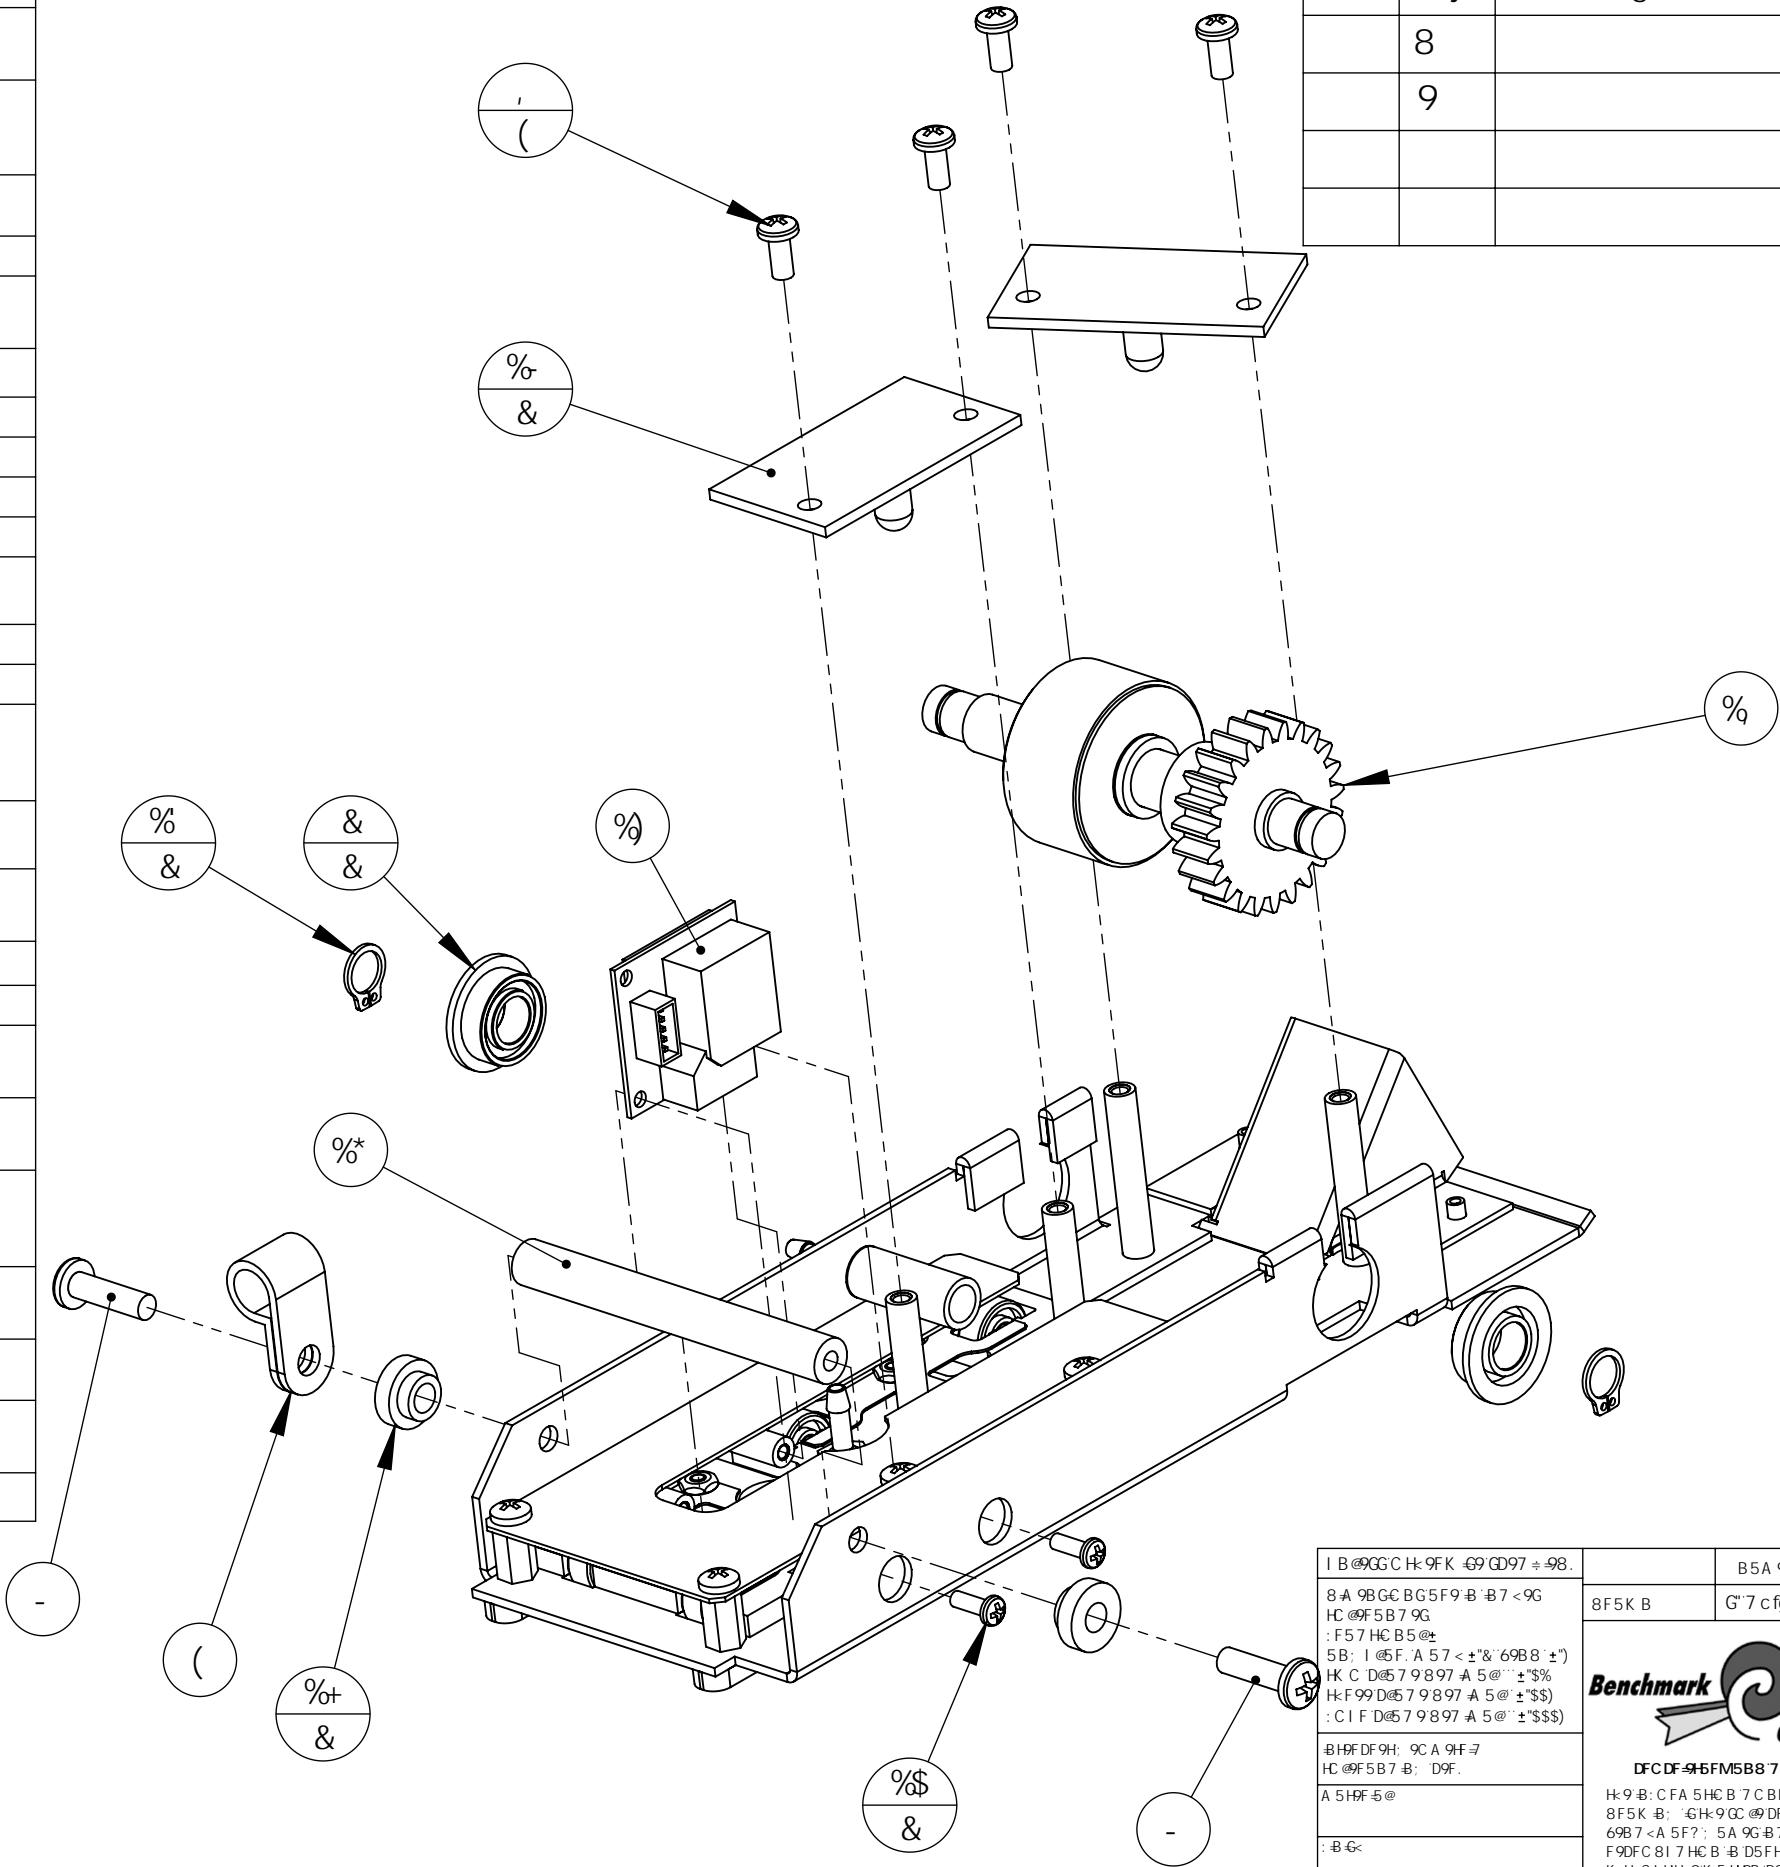

I B@9GC H: 9FK -@9D97 ≠ 98.		B5A 9	85H9	Dgpej o ctnl'I co gu.'Kpe0	
8-A 9B GC BG5F9`B`B7 <9G HC @F5B7 9G : F57HC B5@± 5B: I @5F. A 57<±"&`69B8`±) HK C`D@57 9897`A 5@`"±"\$% H:F99D@57 9897`A 5@`±"\$%) : C I F D@57 9897`A 5@`±"\$\$\$\$)		8F5K B	G`7`c`fgc` ' #, #&\$%%	Hh@. hW_YhYUHYf`hcd`hcd`Wcj Yf`fc`Yf\$	
BHFDF9H: 9CA 9F`7 HC @F5B7`B: D9f. A 5Hf`5@		 DFC Df`-@5FM5B8`7`CB: -@9BH5@		GAP 8K ; ""`BC`"	
: B`G<		H: 9`B: C`FA 5HC`B`7`CBH5`B98`B`H`G 8F5K`B: `G`H: 9`GC @DFC D9f`HMC: `' 69B7`<A 5F?:`5A 9G`B7`"5BM F9DFC 8I`7`HC`B`B`D5FHC`F`5G5`K`<C`@ K`H`C`I`H`H: 9`K`F`H`9B`D9f`A`GGC`B`C: `' 69B7`<A 5F?:`5A 9G`B7`"G DFC`<6498`"		6 \$, +5GA \$&)	
8C B`CHG7`5@98F5K`B:		G7`5@9.`%`%`K`9÷`<H`		G<99H`&`C: `&	


8

7

6

5

#PA`BC"	8YgWfdhjb	DUfhBi a VYf	E HM
%	D7 6\$&&	D7 6!\$&&	%
&	VY`hdi`YmUggm`cb[, +!5 GA !(+	%
,	gdUWf`hW_YhVY`h` UggYa V`m	, +!G7 A !&)	&
(VY`hUggYa V`mWcj Yf` YZh	, +!G<A !\$&	%
)	6F; \$\$%	6F; !\$\$%	(
*	hW`!`Gdi f[YUf' &8D` ' &H%(") D5`"% +): K`'!!! G &B"+) <"+) @`"% +) B	, +!; 9F!\$&	%
+	VY`hUggYa V`mWcj Yf	, +!5 GA !*%	%
,	\$, +6@!\$\$%	i fYh\Ub`VY`h	&
-	7 F!D<A G"\$,\$, *!) *! \$"&) \$"&) B	B #5	&
\$\$	Wc`Uf`g`UZh&) \$	<5F!\$' (%
%%	D7 6\$&\$	c dh` hfUbg` JhYf` gei UfY	%
%&	A G<LBI H\$"% , !' &!G7	B #5	&
%	VY`hdi`YmUggmg\c fh	, +!5 GA !(,	%
%	7 F!D<A G"\$,\$*! , \$! \$"` "%&) \$"` "%&) B		(

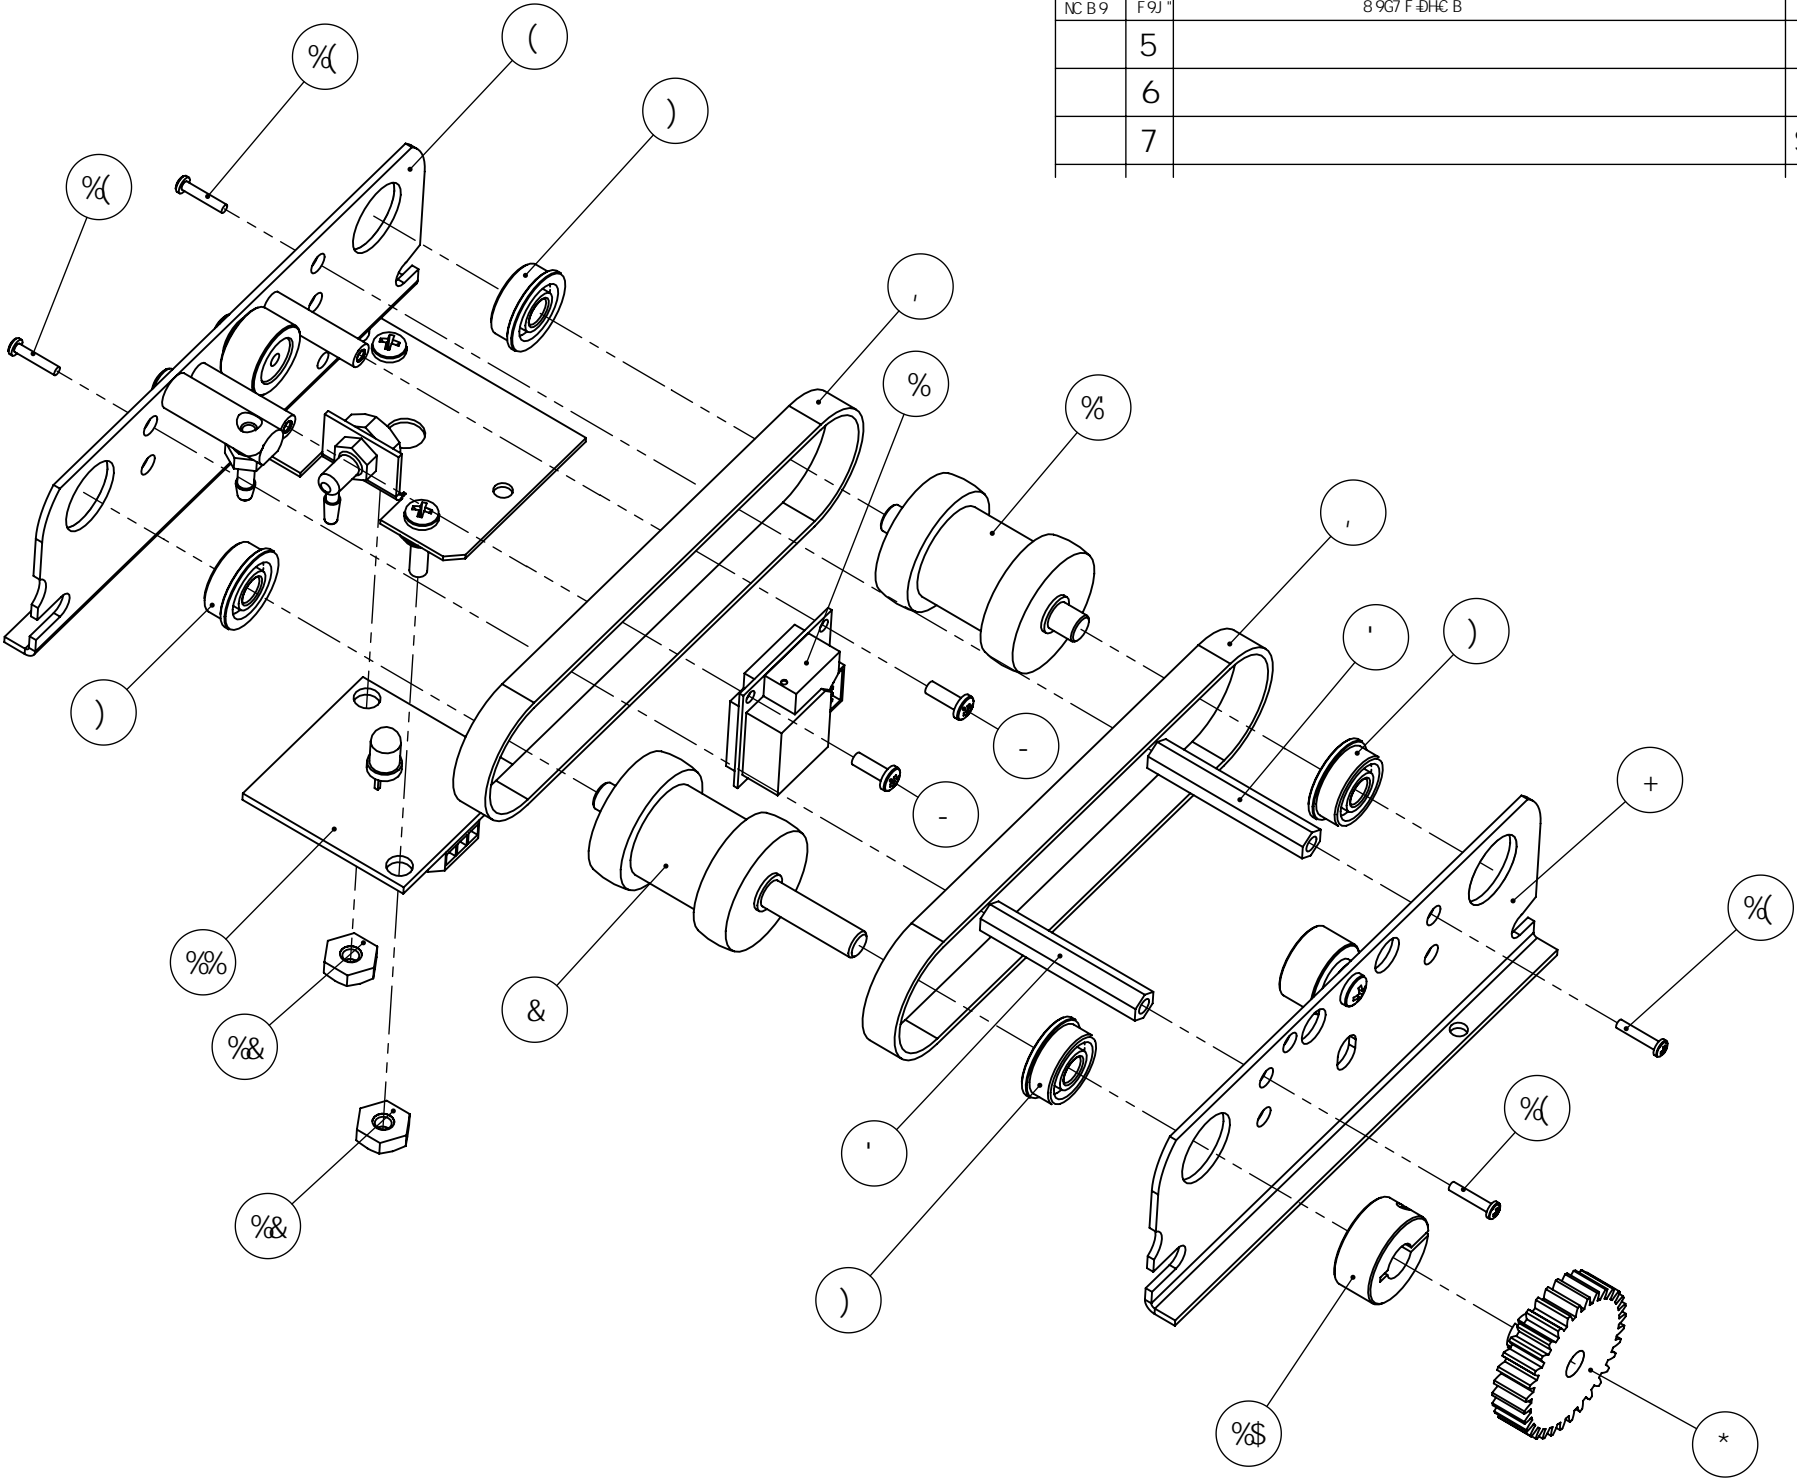

F9J GGC BG			
NCB9	F9J`	89G7 F`DHC B	85H9
	5		\$+ #&* # \$+
	6		\$+ #&+ # \$+
	7		\$&#&) # %&

DFC D F 5 F M S B 8 7 C B : 8 9 B H 5 @ Hk9B: CFA 5HC B 7 CBH5 B 98`B`Hk-G 8F5K`B: `6Hk-9GC @9DFC D9FHMC : 69B7 <A 5F? : 5A 9G`5BM F9DFC B1 7 HC B`B`D5FHCF`5G5 K <C @ K`HkC1 Hk9K F`H9B`D9FA`GGC B`C : 69B7 <A 5F? : 5A 9G`G DFC <6498`	I B @9GC Hk 9F K`G9 GD97 ≠ 98. 8 A 9B GC BG 5 F 9`B`B7 <9G HC @9F5B7 9G 5B; I @5F.`Z # %89: "..... "LLL1".....Z # "\$&" "LLL1".....Z # "\$&" "LLLL1".....Z # "\$&"	6YbW\ a Uf_ ; Ua Yg		
8F5K B 6M`G`7`c fgc	7 C A A 9B HG	H H @9. hW_Y hY U hY f V Y`h 6Y`h5ggY a V`mf] +!5 GA !&* Ł		
A 5H9F-5@		G A 9 6		F 9J
: B G<		8 K ; ""BC" , +!5 GA !&(
		G7 5 @. % %&`K 9≠ <H		G<99H'`C :`*`

8


#9A`BC`"	D5FHBI`A`69F	8`9G7`F`DHC`B	E`HM
%	[X`Yf`di`~`Ymd]b	,`+!G7`A`!\$&	%
&	[X`Yf`di`~`Ymk`c`ZUb[`Yg	,`+!G7`A`!\$%	%
,	Wci`bhcdhc`a`ci`bh`d`UhY	,`+!G<`A`!%`	%
(`9B`\$`\$`\$	`9B!`\$`\$`\$	%
)	\$,`+G7`A`\$&(`	gdUWfVY`h`UggYa`V`m`Y`h	%
*	bi`hZ[VYfcW`((`(\$	B`#5	&
+	7`F!D<`A`G`\$`"%%&!` (\$!`\$`")!`\$`")!B	B`#5	&
,	7`F!D<`A`G`\$`"%%&!` (\$!`\$`"%`,`!`\$`"%`,`!B	B`#5	&
-	-\$`XY[`Z]h[b[`'\$*&	`;`9B!`\$`%(`	%
\$\$	A`G<`L`B!`H`\$`"%`\$!&(!G7`	B`#5	%
%%	gdUWf`,`(`!`%`,`c`X`!`%&`@	B`#5	&
%&	VY`hUggYa`V`mWcj`Yf`f][`\\hgYa	,`+!G<`A`!\$%	%

7


6

#9A`BC`"	D5FHBI`A`69F	8`9G7`F`DHC`B	E`HM
%	[X`Yf`di`~`Ynk`c`ZUb[`Yg	,`+!G7`A`!\$%	%
&	VY`hUggYa`V`mWcj`Yf	,`+!G<`A`!\$%	%
,	[X`Yf`di`~`Ymd]b	,`+!G7`A`!\$&	%
(7`F!D<`A`G`\$`"%%&!` (\$!`\$`"%`,`!`\$`"%`,`!B	B`#5	%

5

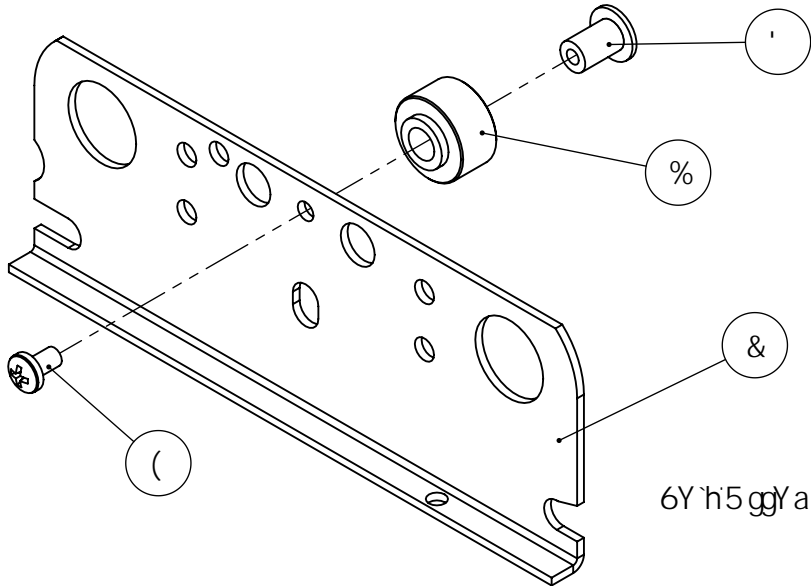

6Y`h5ggYa`V`m7`cj`Yf`@`Y`h

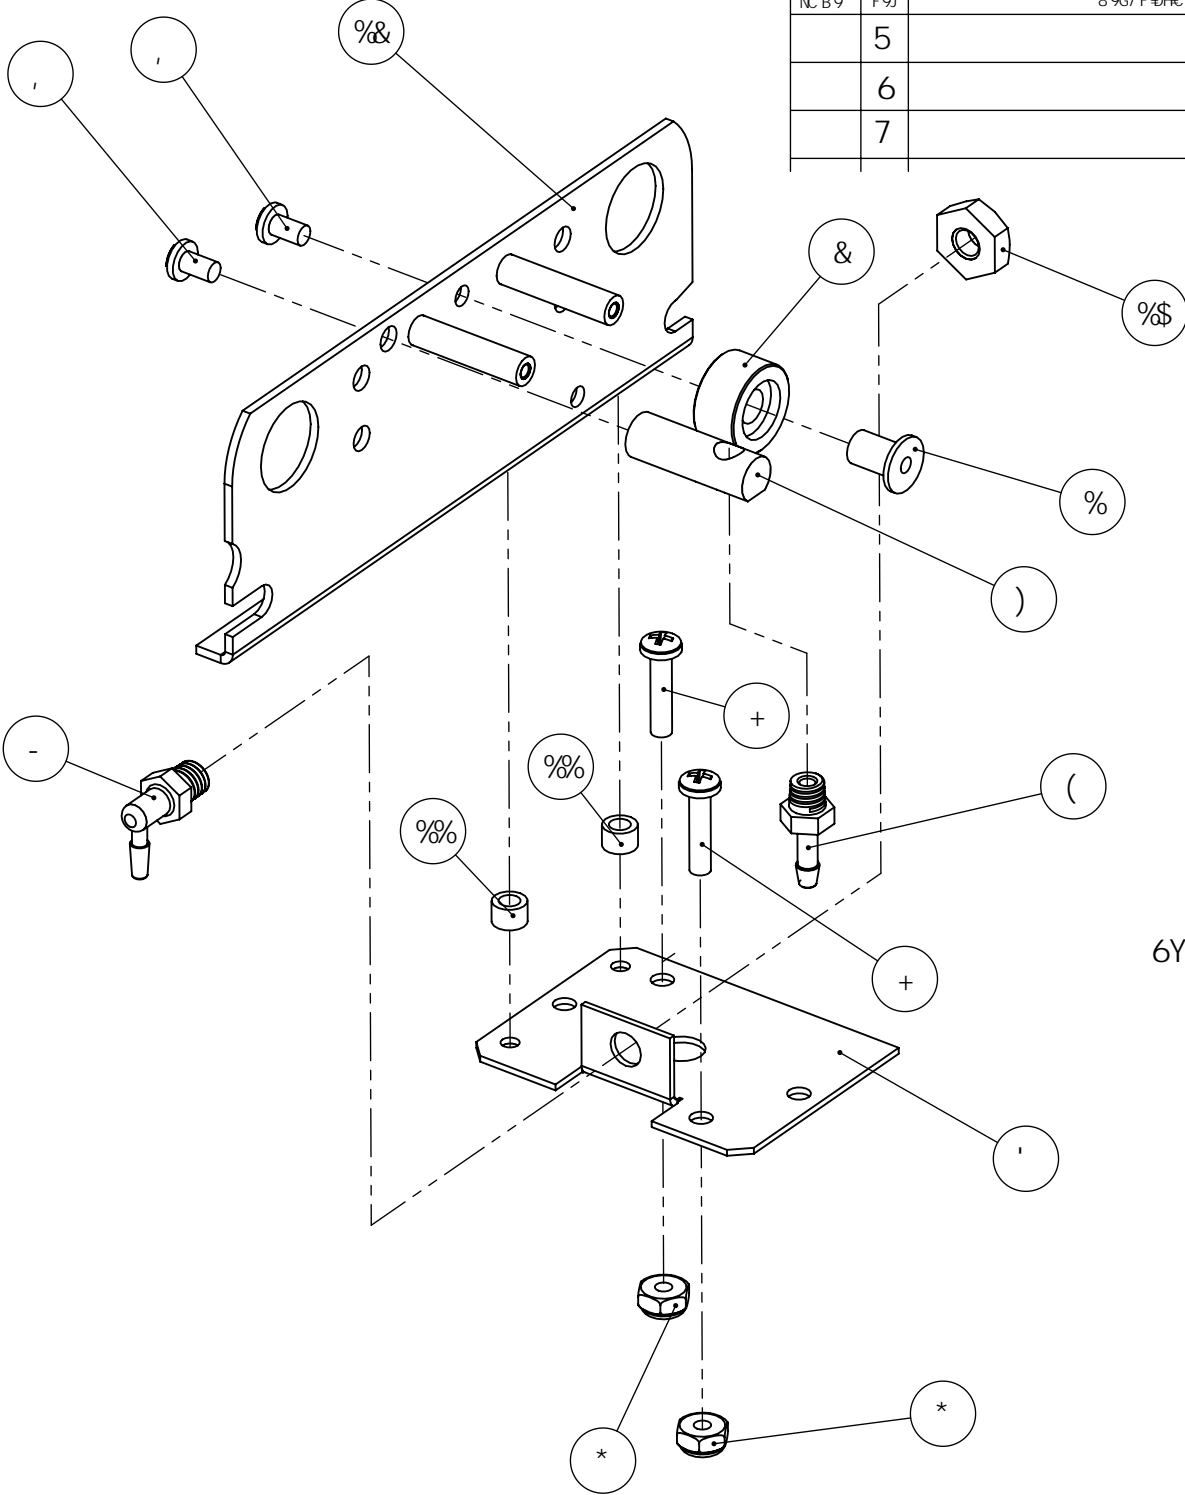

6Y`h5ggYa`V`m7`cj`Yf`@`Y`h

DFC<45FM5B87CB:~89B!H5@ Hk9B:CFA`5HC`B`7`CBH5`B`98`B`Hk`G 8F5K`B`:`~6Hk`9`GC`@9DFC`D9FHMC`: 69B7`<A`5F?`:`5A`9G`"5BM F9DFC`B!`7`HC`B`~B`D5FHCF`5G5`K`<C`@ K`Hk`C!`Hk`9`K`F`H9B`D9FA`GGC`B`C`: 69B7`<A`5F?`:`5A`9G`G` DFC`<~6+98`		I`B`@9GC`Hk`9F`K`~G9`GD97`~98. 8`A`9B`GC`BG5F9`B`~B7`<9G HC`@9F5B7`9G 5B`:`!`@5F`"Z`#`%89`:"`" "LL1`""`Z`#`"\$`\$`" "LLL1`""`Z`#`"\$`\$`" "LLLL1`""`Z`#`"\$`\$`"		6YbW`a`Uf`_`:`Ua`Yg	
8F5K`B`6M`G`"7`c`fgc`		7`C`A`A`9B`HG`		H`H`@9. hW`Y`h`Y`U`H`f`V`Y`h 6Y`h5ggYa`V`m7`cj`Yf`f!`+!5GA`!`*`%& 6Y`h5ggYa`V`m7`cj`Yf`@`Y`h`f!`+!5GA`!`*`&`	
A`5H9F`~5@`				G`A`9`6`K`:`""`BC`"F9J`	
:`B`G<`				G7`5`@9`:"`%`%`K`9`~`<`H`G<`99H(`C`:"`*`	


8

7

6

5

8	±DA BC "	8YgWfJd hcb	DUfhBi a VYf	E HM
	%	hW_YhYUHyf hcd gXY gla	, +!G<A !%&	%
	&	VYhUggYa V`mfY YUgy` WUa`fc`Yf	, +!G7 A !) %	&
7	,	g\ci`XYfVc`h%&`I`%&` I`(((\$	B #5	&
	(VYhUggYa V`mfY YUgy` \UbXY`	, +!G7 A !' \$	%
)	VYhUggYa V`mfY YUgy` WUa`gla	, +!G<A ! ()	%
6	*	g\ci`XYfk UgYf` *I &) \$I * &)	, +!G7 A !) \$	&
	+	VYhUggYa V`mfY YUgy` WUa`fI\`h	, +!G<A ! +,	%
	,	6F; \$\$\$	B #5	&
5	-	I`XYfg\UZhUggn	, +!5 GA !' &	%
	\$\$	gdUWf hcd`UggYa V`m` gdUWfVYhUggYa V`m`	, +!G7 A ! \$,	%
	%%	gdUWfVYhUggYa V`m` Uhx	, +!G7 A ! \$*	%
4	%&	gdUWfVYhUggYa V`m` a ci bh	, +!G7 A ! \$+	%
	%	hW_YhYUHyfVchca` McjYf	, +!G<A ! \$+	%
	%&	fc`Yfg\UZh`ck YfUggn	, +!5 GA !' %	%
3	%&	hW_YhYUHyf hcd gXY` YZh	, +!G<A ! %\$	%
	%*	5: 6A 5`%&`&!`\$"\$&) \$\$\$`! \$") \$\$\$!`\$"\$&) \$!` %&Z`B 7 Z&	B #5	&
	%+	7 F!D<A G`\$"%&! (\$I`\$&) I`\$"\$&) !B	B #5)
2	%	7 F!D<A G`\$"%&! (\$I`\$"" +) I`\$"" +) !B		%
	%-	<5F\$\$\$- +	-`\$`XY[fYY` Zhjb[`'\$!`' & hc`\$-(`\cgY`	% \$
	&\$	\$, +5GA \$(-	I`XYfUfa` gXY VYh`	%
1	&%	g\ci`XYfk UgYf` (X I %) I' +)		%
	&&	gUhWVfi g\		%
	&'	7 F!D<A G`\$"\$*! \$I`\$"" +) I`\$"" +) !7		&
0	&(7 F!D<A G`\$"% , ! ' & \$"% , I`\$"% , !B		&
	&)	D7 6\$&\$	cdhc` hfUbga`I`Hyf` gei UfY`	%
	&*	A G<LBI H`\$"%&!(\$!8!G		'
9	&+	A G<LBI H`\$"%&!(\$!G!7		%

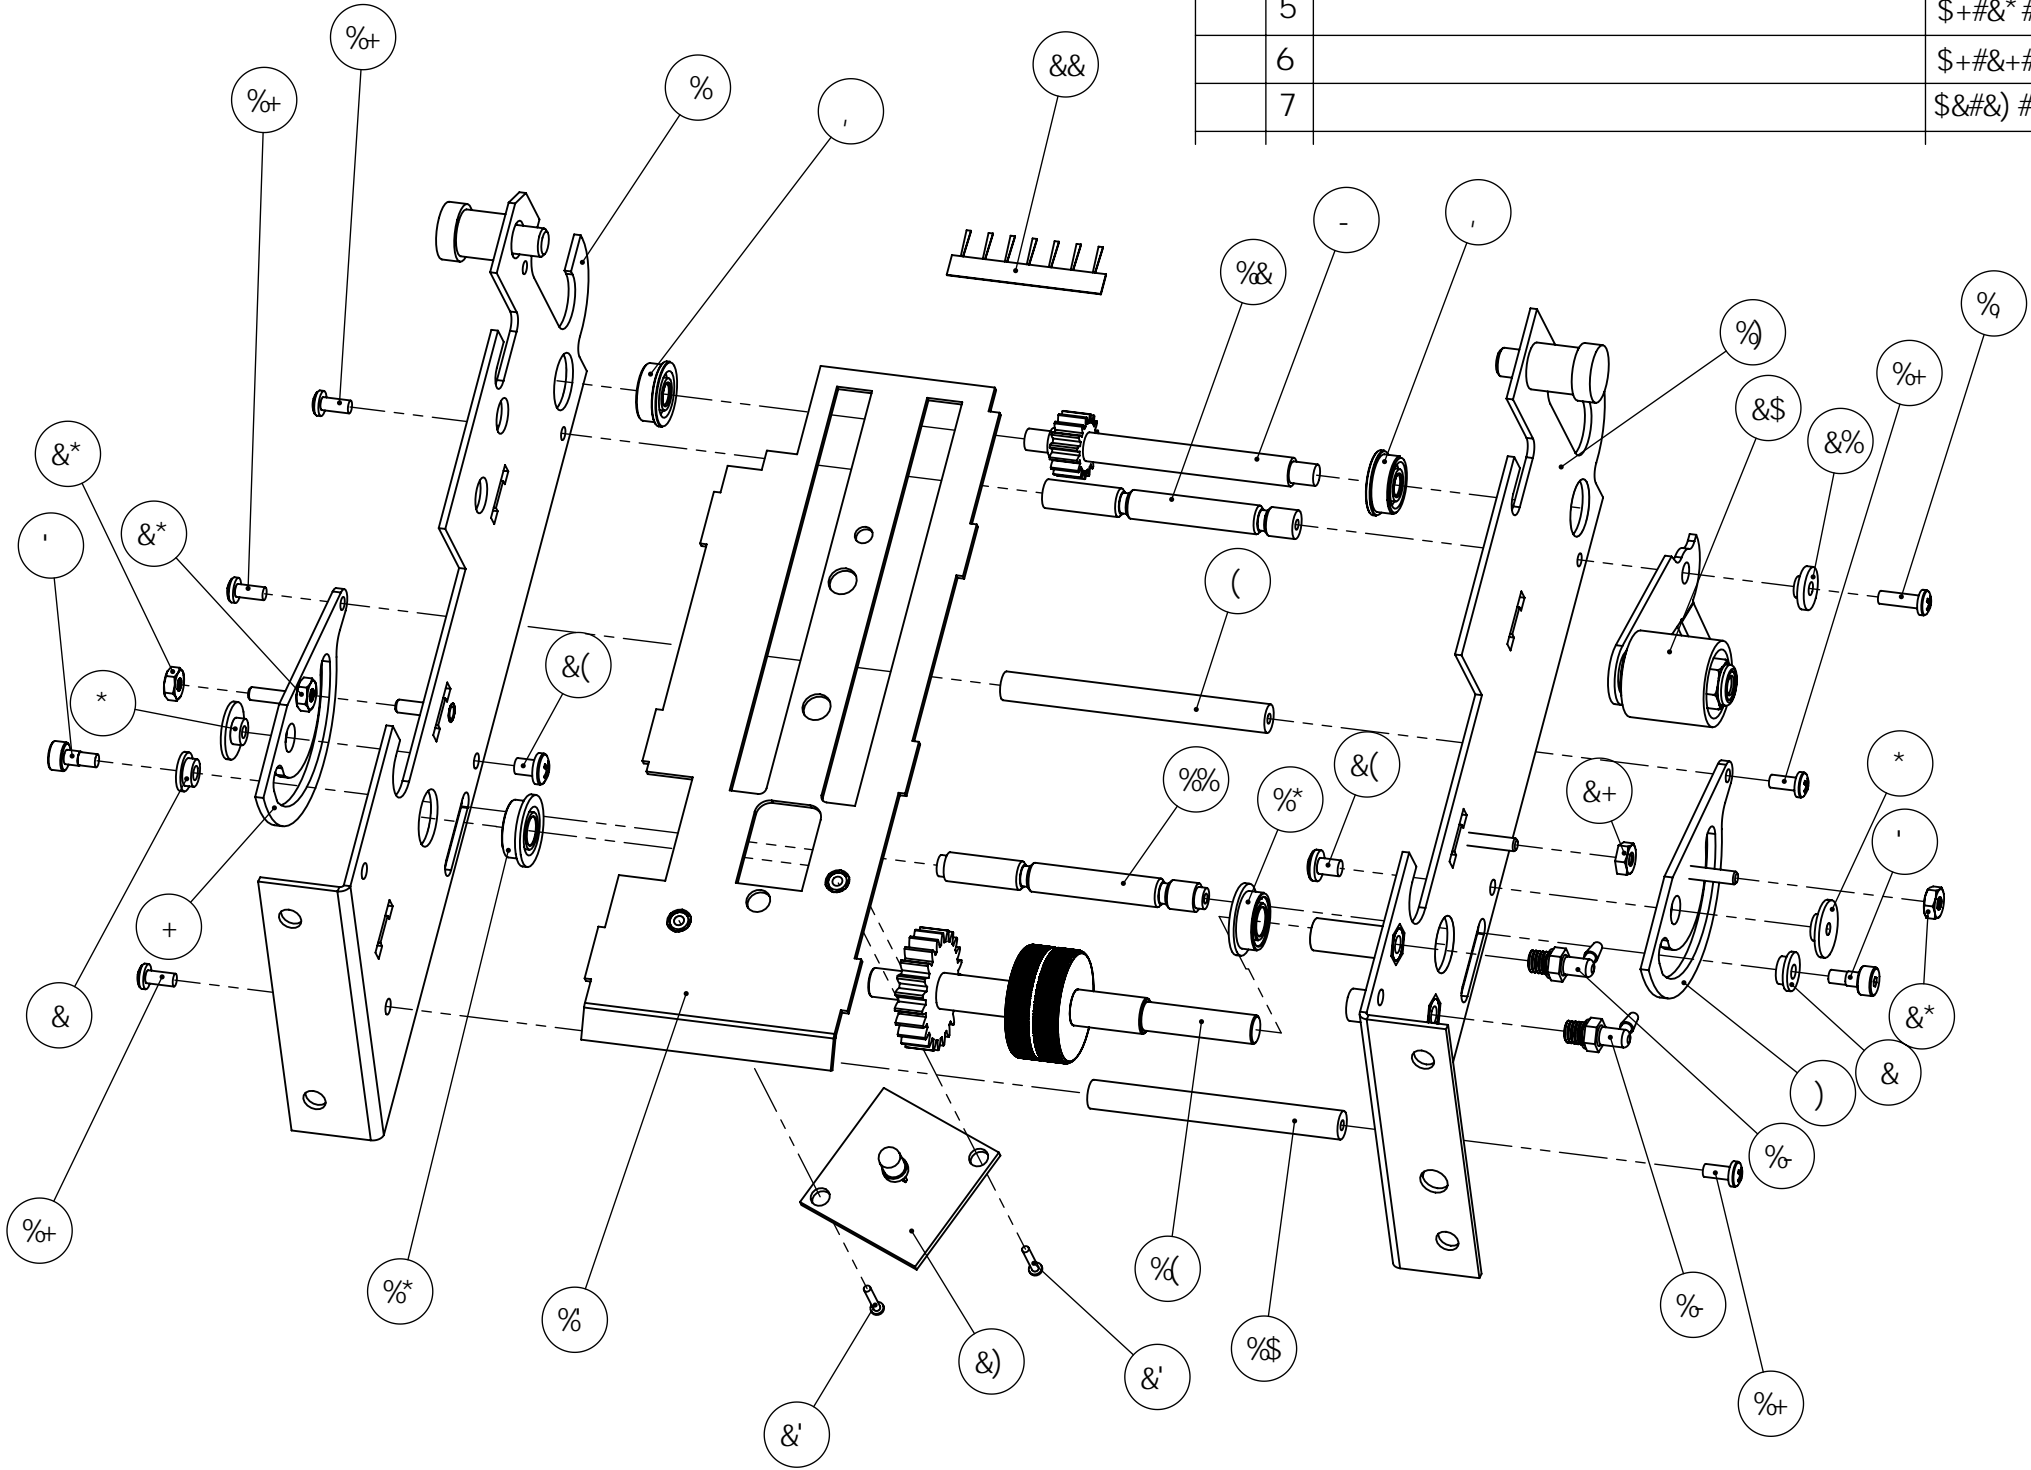

DFC<45FM5B87CB: 89B H5@ Hk9B: CFA 5HC B 7 CBH5 B 98`B`H`G 8F5K`B: `6H`9GC @9DFC D9fHMC: 69B7<A 5F?: 5A 9G`5BM F9DFC B I 7 HC B`B`D5FHCF`5G5 K<C @ K`Hk C I Hk 9K F H 9B`D9FA`GGC B C: 69B7<A 5F?: 5A 9G`G DFC<46498`		I B @9GC Hk 9F K`@9GD97`98. 8 A 9B GC BG 5F 9`B`B7<9G HC @9F5B7 9G 5B; I @5F.`Z#%89: "..... "LLL1".....Z#"\$&\$" "LLL1".....Z#"\$&\$" "LLL1".....Z#"\$&\$"		6YbWla Uf_ ; Ua Yg	
8F5K B`6M`G`7 c fgc		7 C A A 9B HG		H H @9. hW_YhYUHyfVYh` 6cXm5ggYa V`mfI` +!5GA !&+L	
A 5Hf-5@				G A 9	8 K ; "BC "
: B G<				6	, +!5GA !&(
				G7 5 @. % %*) K 9≠ <H	
				G<99H) `C :`*	

