

Diasplay output:
VGA signal

3.5 Audio
output

COM port


Main board power plug 2, from
right to left: 12V, -, -, 5V

Reset key: when turning off the
power supply of the machine,
toggle it back and forth for 3
to 4 times to restore the factory
setting

Memory battery: aftrre you set
the coin number and turn the
machine off and on again, pls
replace the battery if it is
restored to the factory setting.
The batterymodel is CR2032
button cell, which is the same
as the memory battery of desktop
computer

IC Chip position: 1, 2 and 3
from right to left,
with the notch facing down

Main board power plug, from
right to left: -, -, 5V,5V,12V,12V
Never plug in the wrong way

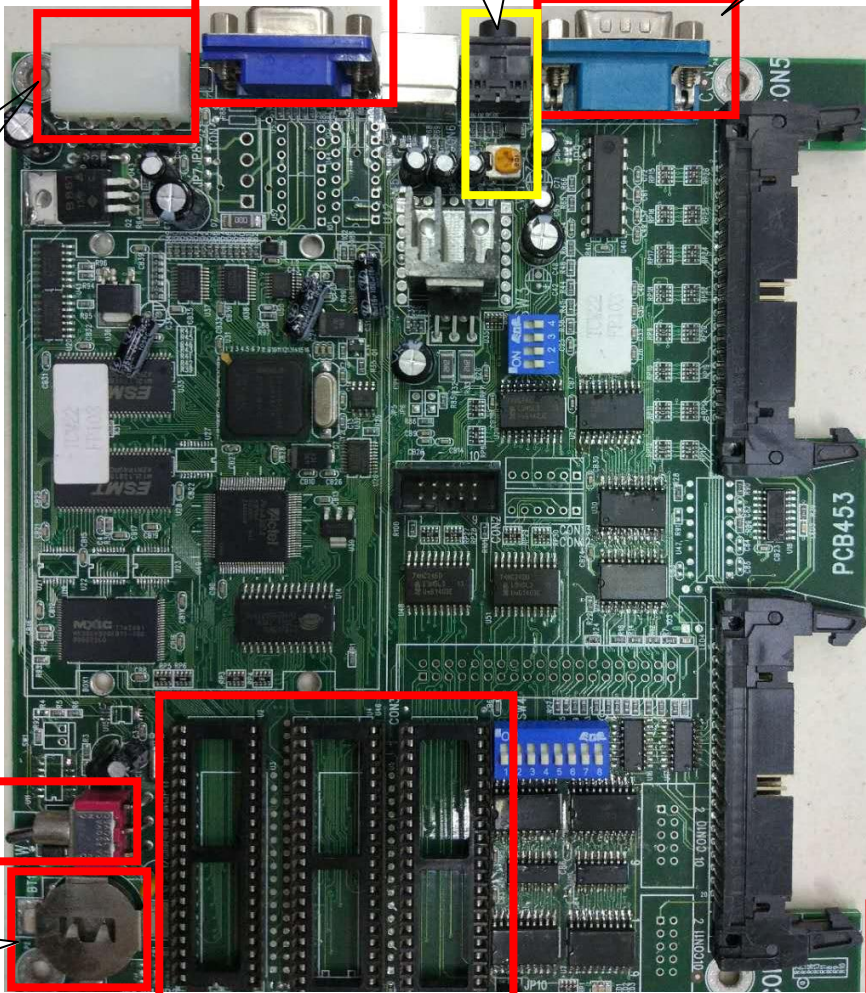

Main board power plug, from
right to left: -, -, 5V,5V,12V,12V
Never plug in the wrong way